

		Runtime Errors		
		Call Control		
Internal Error Value	End User Error	End User Error Value	Description	Action to Be Taken
0x8001	EGC_ILLSTATE	0x92	Invalid state	Consult the documentation for information about what states a channel must be in prior to making this function call.
0x8002	EGC_CCLIBSPECIFIC	0x89	Internal error (INV_TLS	Internal error - contact support.
0x8003	EGC_INVLINEDEV	0x43	Invalid line device	Pass a valid line device.
0x8004	EGC_INVDEVNAME	0x8E	Invalid board device	Pass a valid board device.
0x8005	EGC_CCLIBSPECIFIC	0x89	Too many CRNs on the line device	Consult the documentation for the usage of this protocol.
0x8006	EGC_DTIERR	0x32	DTI error	Internal error - contact support.
0x8007	EGC_INVPARM	0x44	Invalid parameter	Consult the documentation for a list of parameters and valid values to set them to.
0x8008	EGC_INVPARM	0x44	Invalid info ID	Consult the documentation for a list of parameters and valid values to set them to.
0x8009	EGC_LINERELATED	0x40	Event is line device related	
0x800A	EGC_UNSUPPORTED	0xA	Function not implemented	Consult the documentation for the features supported by the hardware.
0x800B	EGC_INVCRN	0x42	Invalid CRN	Consult the documentation for the usage of this protocol.
0x800C	EGC_SYNC	0x08	Invalid SYNC/ASync mode	Consult the documentation for the values the mode parameter can be set to.
0x800D	EGC_INVPARM	0x44	Invalid parameter ID	Consult the documentation for a list of parameters and valid values to set them to.
0x800E	EGC_DXOPEN	0x16	Error opening voice device	Consult the documentation for the features supported by the hardware.
0x800F	EGC_INVDEVNAME	0x8E	Invalid device name	Consult the documentation for the proper formatting of device names.
0x8010	EGC_CCLIBSPECIFIC	0x89	No siginfo available	Internal error - contact support.
0x8011	EGC_VOICE	0xC	No voice device attached	Consult the documentation for the features supported by the hardware.
0x8012	EGC_CCLIBSPECIFIC	0x89	Internal error: failed to initialize evt msk table	Internal error - contact support.
0x8013	EGC_INVSTATE	0x41	Channel is already waiting for calls	The channel must be idle prior to calling this function.
0x8014	EGC_CCLIBSPECIFIC	0x89	Internal error: exception in CallIDMap	Internal error - contact support.
0x8015	EGC_DTOPEN	0x8F	Error opening DTI device	Consult the documentation for the features supported by the hardware.

0x8016	EGC_CCLIBSPECIFIC	0x89	Internal error: IE size mismatch	Internal error - contact support.
0x8017	EGC_TIMEOUT	0x09	Timeout	Consult the documentation for the usage of this protocol.
0x8018	EGC_USER	0x0B	Function Interrupted by User	none.
0x8019	EGC_NO_MORE_AVL	0x10E	No frame available	none.
0x801A	EGC_SYSTEM	0x1D	Firmware not configured for Layer2 access	Consult the documentation for the features supported by the hardware.
0x801B	EGC_DTGETXMITSLLOT	0x109	Error in dt_getxmitslot	Internal error - contact support.
0x801C	EGC_DTLISTEN	0x10C	Error in dt_listen	Internal error - contact support.
0x801D	EGC_DXGETXMITSLLOT	0x109	Error in dx_getxmitslot	Internal error - contact support.
0x801E	EGC_DXLISTEN	0x10C	Error in dx_listen	Internal error - contact support.
0x801F	EGC_INVSTATE	0x41	Data link is down	Check the state of the physical link and resolve any issues related to it.
0x8020	EGC_CCLIBSPECIFIC	0x89	Unable to load IPML	Internal error - contact support.
0x8021	EGC_CCLIBSPECIFIC	0x89	Too many frames buffered	Internal error - contact support.
0x8022	EGC_UNSUPPORTED	0x0A	Feature not supported by firmware	Consult the documentation for the features supported by the hardware.
0x8023	EGC_INVSTATE	0x41	Multitasking function already active	The channel must be idle prior to calling this function.
0x8024	EGC_NO_MORE_AVL	0x10E	No more info available	none.
0x8025	EGC_UNSUPPORTED	0x0A	Feature not supported by the protocol	Consult the documentation for a list of features supported by each protocol.
0x8026	EGC_SYSTEM	0x1D	Internal error: GC CME failure	Internal error - contact support.
0x8027	EGC_SYSTEM	0x1D	Internal error: GC DB failure	Internal error - contact support.
0x8028	EGC_CCLIBSPECIFIC	0x89	Function already issued	The function must complete prior to being called again.
0x8029	EGC_CCLIBSPECIFIC	0x89	Error in FW response	Internal error - contact support.
0x802A	EGC_CCLIBSPECIFIC	0x89	Internal error: queue size of tracing	Internal error - contact support.
0x802B	EGC_INVTARGETID	0x130	Invalid target ID	Consult the documentation for a list of parameters and valid values to set them to.
0x802C	EGC_INVSETID	0x134	Invalid SET ID	Consult the documentation for a list of parameters and valid values to set them to.
0x802D	EGC_INVPARMID	0x135	Invalid PARM ID	Consult the documentation for a list of parameters and valid values to set them to.
0x802E	EGC_PARM_UPDATEPERM_ERR	0x13E	Not permit to change	Consult the documentation for a list of parameters and valid values to set them to.
0x802F	EGC_PARM_VALUESIZE_ERR	0x137	Incorrect value size	Consult the documentation for a list of parameters and valid values to set them to.

0x8030	EGC_PARM_VALUE_ERR	0x138	Value data error	Consult the documentation for a list of parameters and valid values to set them to.
0x8031	EGC_INVPARM_PROTOCOL	0x05	Protocol does not recognize this parm	Consult the documentation for a list of parameters and valid values to set them to.
0x8032	EGC_INVPARM_FIRMWARE	0x13D	Firmware does not recognize this parm	Consult the documentation for a list of parameters and valid values to set them to.
0x8033	EGC_PARM_DATATYPE_ERR	0x13E	Unsupported data type	Internal error - contact support.
0x8034	EGC_INVQUERYID	0x141	Invalid QUERY ID	Internal error - contact support.
0x8035	EGC_QUERYEDATA_ERR	0x142	Data query error	Internal error - contact support.
0x8036	EGC_PARM_FAILURE	0x144	Failure in processing the parm	Consult the documentation for a list of parameters and valid values to set them to.
0x8037	EGC_NOT_ENABLED	0x166	Option not enabled	Consult the documentation for the features supported by the hardware.
0x8C01	EGC_DEVICE	0x04	Invalid HiZ device	Consult the documentation for the features supported by the hardware.
0x2001	EGC_NOMEM	0x19	Out of memory	Check the system for excessive memory usage.
0x2002	EGC_SYSTEM	0x1D	System error	Internal error - contact support.
0x2003	EGC_TIMER	0x1B	Internal error: Timer initialization error	Internal error - contact support.
0x2004	EGC_TIMER	0x1B	Internal error: Timer already active	Internal error - contact support.
0x2005	EGC_SRL	0x45	Internal error: SRL failure	Internal error - contact support.
0x2006	EGC_PUTEVT	0x14	Internal error: SRL putevt failure	Internal error - contact support.
0x2007	EGC_TIMEOUT	0x09	Function timed out	Internal error - contact support.
0xFFFF	EGC_INTERR	0x18	Unknown error	Internal error - contact support.
0x4001	EGC_INTERR	0x18	Internal error: mntEnumMpathDevice failed	Internal error - contact support.
0x4002	EGC_INTERR	0x18	Internal error: CreateFile(Mpath failed	Internal error - contact support.
0x4003	EGC_INTERR	0x18	Internal error: mntGetMpathAddr failed	Internal error - contact support.
0x4004	EGC_INTERR	0x18	Internal error: mntSetExitNotify failed	Internal error - contact support.
0x4005	EGC_INTERR	0x18	Internal error: MPath::SendMessage failed	Internal error - contact support.
0x4006	EGC_INTERR	0x18	Internal error: CreateloCompletionPort failed	Internal error - contact support.
0x4007	EGC_INTERR	0x18	Internal error: Failed to attach handle to IOCP	Internal error - contact support.
0x4008	EGC_INTERR	0x18	Internal error: Invalid DM3 parameter	Internal error - contact support.
0x4009	EGC_INTERR	0x18	Internal error: PostQueueCompletionStatus failed	Internal error - contact support.
0x400A	EGC_INTERR	0x18	Internal error: no TLS index assigned	Internal error - contact support.
0x400B	EGC_INTERR	0x18	Internal error: General streaming error	Internal error - contact support.
0x400C	EGC_INTERR	0x18	Internal error: mntEnumStrmDevice failed	Internal error - contact support.
0x400D	EGC_INTERR	0x18	Internal error: CreateFile(Stream failed	Internal error - contact support.
0x400E	EGC_INTERR	0x18	Internal error: mntAttachMercStream failed	Internal error - contact support.

0x400F	EGC_INTERR	0x18	Internal error: error in message dispatching subsystem	Internal error - contact support.
		Fax		
Internal Error Value	End User Error	End User Error Value	Description	Action to Be Taken
0	EFX_NOERROR	0	No error	none
0x0101	EFX_POLLED	0x0101	Poll received	This may not be an error. Consult the documentation for how polling can be handled.
0x0102	EFX_NOPOLL	0x0102	Remote rejected poll	The remote end does not support polling. The call should be abandoned.
0x0103	EFX_COMPAT	0x0103	Hardware incompatibility	Check the documentation for supported hardware features.
0x0104	EFX_BADTIF	0x0104	Incorrect TIFF/F format	Consult the documentation for the specific TIFF tags that are supported.
0x0105	EFX_BADTAG	0x0105	Incorrect TIFF/F tag value	Consult the documentation for the TIFF tag values that are supported.
0x0106	EFX_NOPAGE	0x0106	Page missing in TIFF/F file	Check the TIFF file to ensure it is correct and has not been corrupted.
0x0107	EFX_DISCONNECT	0x0107	Remote has disconnected	The remote end has disconnected - the call should be abandoned.
0x0108	EFX_RETRYDCN	0x0108	Disconnected after max retries	There may be quality issues on the line or a problem with the receiving end. The call should be abandoned.
0x0109	EFX_BADIOTT	0x0109	DF_IOTT has incorrect entries	Consult the documentation for the proper way of initializing DF_IOTT structures.
0x010A	EFX_BADPAGE	0x010A	Not a valid page in TIFF/F file	Check the TIFF file to ensure it is correct and has not been corrupted.
0x010B	EFX_NOSTATE	0x010B	Initial state not set	The device must be set to be a receiver or a sender prior to issuing fax API calls.
0x010C	EFX_BADSTATE	0x010C	Incorrect value for initial state	Consult the documentation for the proper values which can be used to set the initial state.
0x010D	EFX_MAXCHAN	0x010D	Max channel capacity reached	Consult the documentation for the maximum number of fax channels that are supported by your hardware.
0x010E	EFX_NOMEM	0x010E	Cannot allocate memory for more pages	Check the system for excessive memory usage.
0x010F	EFX_INVALIDARG	0x010F	Illegal argument to function	Consult the documentation for the valid arguments to the function.
0x0110	EFX_INVALIDFUNC	0x0110	Illegal function call	Consult the documentation for the conditions under which the function may be called.

0x0111	EFX_NOFAX	0x0111	No fax capability	Consult the documentation for the feature supported by the hardware.
0x0112	EFX_NOTIDLE	0x0112	Channel busy	Ensure that the channel is busy prior to calling this function.
0x0113	EFX_BADPARM	0x0113	Invalid value for fax parameter	Consult the documentation for the values supported for each fax parameter.
0x0114	EFX_BADTFHDR	0x0114	Bad TIFF/F header	Check the TIFF file to ensure it is correct and has not been corrupted.
0x0115	EFX_UNSUPPORTED	0x0115	Unsupported Feature	Consult the documentation for the feature supported by the hardware.
0x01FD	EFX_BADPHASE	0x01FD	Bad phase transition	Verify that the equipment on the other end is functioning properly.
0x01FE	EFX_DRVERROR	0x01FE	Driver error	Internal error - contact support.
0x01FF	EFX_LIBERROR	0x01FF	Library error	Internal error - contact support.
0x01FC	EFX_FWERROR	0x01FC	Firmware error	Internal error - contact support.
0x01FB	EFX_CMDDATA	0x01FB	Invalid cmd/data sent to Firmware	Internal error - contact support.
0x0118	EFX_NSFBUFF	0x0118	NSF Buffer less than 2 bytes long	Internal error - contact support.
0x011B	EFX_INVALID_FONT	0x011B	Invalid font file specified	Internal error - contact support.
0x0119	EFX_NODATA	0x0119	Requested data not available	Internal error - contact support.
0x2001	EFX_NORESOURCE	0x2001	No resource available error	Internal error - contact support.
0x2002	EFX_INUSE	0x2002	Channel Busy	Internal error - contact support.
0x2003	EFX_DSPERROR	0x2003	Resource DSP error	Internal error - contact support.
0x100	EFX_NOTIMP	0x100	Function Not Implemented	Internal error - contact support.
0x01FF	EFX_LIBERROR	0x01FF	Not enough memory	Internal error - contact support.
0x01FF	EFX_LIBERROR	0x01FF	System error	Internal error - contact support.
0x01FF	EFX_LIBERROR	0x01FF	Synchronous function timeout	Internal error - contact support.
		DCB		
Internal Error Value	End User Error	End User Error Value	Description	Action to Be Taken
0x3900	E_MSINVPTYNUM	0xCC	Invalid party number	Ensure that a valid party number is passed.
0x3901	E_MSINVPATTR	0xD6	Invalid Attribute	Consult the documentation for a list of attributes that may be used.
0x3902	E_MSINVPATTR	0xD6	Invalid Attribute	Consult the documentation for a list of attributes that may be used.
0x3903	E_MSINVPATTR	0xD6	Invalid Attribute	Consult the documentation for a list of attributes that may be used.

0x3904	E_MSINVPATTR	0xD6	Invalid Attribute	Consult the documentation for a list of attributes that may be used.
0x3905	E_MSINVTS	0xC0	Invalid timeslot	Ensure that a proper timeslot has been passed.
0x3906	E_MSCNFFUL	0xCF	Conference is full	Consult the documentation for the limits on the number of parties that can be added to a conference.
0x3907	E_MSINVPTYCNT	0xCA	Invalid number of parties in message	Ensure that the proper number of parties has been specified.
0x3908	E_MSCNFLMT	0xE7	Conference limit exceeded	Consult the documentation for the limits on the number of parties that can be added to a conference.
0x3909	E_MSBADVAL	0xAC	Bad value specified	Consult the documentation for a list of proper values that can be passed.
0x390c	E_MSIECNOTSUPPORTED	0xF3	Echo Cancellation not supported	Consult the documentation for what features are supported on the hardware in use.
0x70003901	E_MSBADCHPARAM	0xC2	Bad channel parameter specified	Consult the documentation for a list of parameters supported.
0x70003902	EDT_NOMEMERR	0x05	No memory available	Internal error - contact support.
0x70003903	EDT_BADCMDERR	0x06	Bad Command	Internal error - contact support.
		Voice Library		
Internal Error Value	End User Error	End User Error Value	Description	Action to Be Taken
0	EDX_NOERROR	0	No error	none
1	EDX_SYSTEM	1	System error	Internal error - contact support.
2	EDX_FWERROR	2	Firmware error	Internal error - contact support.
3	EDX_TIMEOUT	3	I/O function timeout	Internal error - contact support.
4	EDX_BADIOTT	4	IOTT structure error	Consult the documentation regarding the initialization of IOTT structures.
5	EDX_BADTPT	5	TPT structure error	Consult the documentation regarding the initialization of TPT structures.
6	EDX_BADPARAM	6	Parameter error	Consult the documentation for proper parameters and their settings.
7	EDX_BADDEV	7	Device descriptor error	Ensure that a valid device handle is being used.
8	EDX_BADPROD	8	Function not supported	Consult the documentation for the features supported by the hardware.
9	EDX_BUSY	9	Device busy	Ensure that the device is idle when using this function.
10	EDX_IDLE	10	Device idle	This is not necessarily an error.
11	EDX_STOPRINGS	11	Wait-for-rings stopped by user	This is not necessarily an error.

12	EDX_BADWAVEFILE	12	Bad/Unsupported WAV File	Consult the documentation for the WAV file features that are supported by the hardware.
13	EDX_XBPBPARAM	13	Bad XPB structure	Consult the documentation regarding the initialization of XPB structures.
14	EDX_NOSUPPORT	14	Function or Format not supported	Consult the documentation for the features supported by the hardware.
15	EDX_NOTIMP	15	Function not implemented	Consult the documentation for the features supported by the hardware.
0x41	EDX_TONEID	0x41	Bad Tone Template ID	Consult the documentation for a list of proper tone template IDs.
0x42	EDX_MAXTMPLT	0x42	Max number of Templates Exists	Some templates must be removed before others can be added.
0x43	EDX_INVSUBCMD	0x43	Invalid Sub Command Number	Internal error - contact support.
0x44	EDX_CHANNUM	0x44	Invalid Channel Number Specified	Internal error - contact support.
0x45	EDX_FREQDET	0x45	Invalid Freq Component Values in Tone Template Description	Consult the documentation for the proper settings of fields in tone templates.
0x46	EDX_CADENCE	0x46	Invalid Cadence Component Values in Tone Template Description	Consult the documentation for the proper settings of fields in tone templates.
0x47	EDX_ASCII	0x47	Invalid ASCII Value in Tone Template Description	Consult the documentation for the proper settings of fields in tone templates.
0x48	EDX_DIGTYPE	0x48	Invalid Dig_Type Value in Tone Template Description	Consult the documentation for the proper settings of fields in tone templates.
0x49	EDX_MSGSTATUS	0x49	Invalid Message Status Setting	Internal error - contact support.
0x4A	EDX_SVADJBLKS	0x4A	Invalid Number of Speed/Volume Adjustment Blocks	Consult the documentation for the proper settings of fields in speed and volume structures.
0x4B	EDX_SPDVOL	0x4B	Must Specify either SV_SPEEDTBL or SV_VOLUMETBL	Consult the documentation for the proper settings of fields in speed and volume structures.
0x4C	EDX_SVMTSIZE	0x4C	Invalid Table Size Specified	Consult the documentation for the proper settings of fields in speed and volume structures.
0x4D	EDX_SVMTRANGE	0x4D	An Entry in SV_SVMT was out of Range	Consult the documentation for the proper settings of fields in speed and volume structures.
0x4E	EDX_NONZEROSIZE	0x4E	Reset to Default was Requested but size was non-zero	Consult the documentation for the proper settings of fields in speed and volume structures.
0x4F	EDX_FLAGGEN	0x4F	Invalid tg_dflag field in Tone Generation Template	Consult the documentation for the proper settings of fields in tone generation structures.
0x50	EDX_FREQGEN	0x50	Invalid Freq Component in Tone Generation Template	Consult the documentation for the proper settings of fields in tone generation structures.

0x51	EDX_AMPLGEN	0x51	Invalid Amplitude Value in Tone Generation Template	Consult the documentation for the proper settings of fields in tone generation structures.
0x59	EDX_SH_CMDBLOCK	0x59	Blocking Command is in progress	Internal error - contact support.
0x60	EDX_SH_BADCMD	0x60	Command not supported	Internal error - contact support.
0x61	EDX_SH_LIBBSY	0x61	Switching Handler Library is busy	Internal error - contact support.
0x62	EDX_SH_BADINDX	0x62	Invalid Switching Handler index number	Internal error - contact support.
0x63	EDX_SH_LIBNOTINIT	0x63	Switching Handler Library has not been initialized	Internal error - contact support.
0x64	EDX_SH_NOCLK	0x64	Switching Handler Clock fallback failed	Internal error - contact support.
0x66	EDX_SH_MISSING	0x66	Switching Handler is not Present	Internal error - contact support.
0x6A	EDX_SH_BADMODE	0x6A	Invalid Switching Handler Bus Mode	Internal error - contact support.
0x6F	EDX_SH_BADLCLTS	0x6F	Invalid local timeslot (Channel)	Internal error - contact support.
0x70	EDX_SH_BADTYPE	0x70	Invalid local timeslot type	Internal error - contact support.
0x71	EDX_SH_BADEXTTS	0x71	External timeslot not supported at current clock rate	Internal error - contact support.
0x72	EDX_SH_LCLTSCNCT	0x72	Channel is already connected to SCbus	Ensure that the channel has been unrouted before attempting to reroute it.
0x73	EDX_SH_LCLDSCNCT	0x73	Channel is already disconnected from SCbus	Once a channel has been removed from the SCbus, it cannot be removed again.
0x80	EDX_CLIDINFO	0x80	Caller ID info/sub-msg not available	Check that the phone line supports caller ID.
0x81	EDX_CLIDBLK	0x81	Caller ID private or blocked	Not an error, caller ID is not available due to it being blocked or set to private.
0x82	EDX_CLIDOOA	0x82	Caller ID Out of Area	Not an error, caller ID is not available due to it being out of area.
0x90	EDX_BADREGVALUE	0x90	Unable to locate value in registry	Internal error - contact support.
0x91	EDX_BADTSFFILE	0x91	Filename doesn't exist or not valid TSF	Check the configuration of the TSF file. Consult the documentation for how to do this.
0x92	EDX_BADTSFDATA	0x92	TSF Data not consolidated	The TSF file that is configured for use has not been consolidated by PBXpert. Consult the documentation for more details.
0x93	EDX_FEATUREDISABLED	0x93	TSF File support disabled	A TSF file has not been configured for use on the system.
0x52	EDX_TNQUERYDELETE	0x52	Tone not queried and/or deleted prior to create	Consult the documentation for the steps to be followed to create a new tone template.
1	EDX_SYSTEM	1	Not enough memory	Check the system for excessive memory usage.
1	EDX_SYSTEM	1	System error	Internal error - contact support.
3	EDX_TIMEOUT	3	Synchronous function timeout	Internal error - contact support.

		MSI		
Internal Error Value	End User Error	End User Error Value	Description	Action to Be Taken
0x06	EDT_BADCMDERR	0x06	Bad Command	Internal error - contact support
0xEF	E_MSERRCHANSTATE	0xEF	Channel in a bad state	Ensure that the channel is in the proper state for this command
0x70F02000	EDT_FWERR	0x08	Firmware Error	Internal error - contact support
0x70F02001	EDT_FWERR	0x08	Firmware Error	Internal error - contact support
0x70F02002	EDT_FWERR	0x08	Firmware Error	Internal error - contact support
0x70F02003	EDT_FWERR	0x08	Firmware Error	Internal error - contact support
0x70F02004	EDT_FWERR	0x08	Firmware Error	Internal error - contact support
0x70F02005	EDT_FWERR	0x08	Firmware Error	Internal error - contact support
0x028002	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x028003	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x028004	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x028005	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x028006	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x028007	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x02800a	EDT_BADDEV	0x0C	Bad Device	Ensure that a proper device handle has been passed to the function.
0x0280f4	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0280f5	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0280f6	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0280f7	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0280f8	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0280f9	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0280fa	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x02800c	EDT_TSASN	0xAB	Timeslot already assigned	Timeslots cannot be assigned more than once. Use another timeslot.
0x02800d	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.

0x028010	EDT_NOIDLEERR	0x0A	Timeslot not in an idle state	Ensure that the timeslot is not assigned to another resource and is busy.
0x028011	EDT_SUCC	0x00	Success	none
0x028021	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x028022	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x028023	EDT_INVTS	0xA7	Invalid Timeslot	Ensure that a proper timeslot has been passed.
0x0B	EDT_SYSTEM	0x0B	System Error - error value set in errno	Check the value of errno for more detail on the error.
0x0B	EDT_SYSTEM	0x0B	System Error - error value set in errno	Check the value of errno for more detail on the error.

		Firmware Errors		
		DSP		
Resource	Loc Hex	Error Class	Error Subclass	Action to Be Taken
AD12	0x800000	Unused		
AD12	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x800002	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x800003	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800004	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x800005	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800006	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80000A	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80000C	Unexpected Message or State Machine Error		Redownload the board and restart the application

AD12	0x80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80000E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800010	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x800011	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800013	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800014	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800015	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800016	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800017	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800018	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x800019	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x80001A	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80001B	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x80001C	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application

AD12	0x80001D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80001E	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x80001F	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800012	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800021	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800022	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800023	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800024	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800025	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800027	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800028	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800029	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80002A	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x80002B	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x80002C	Unexpected Message or State Machine Error		Redownload the board and restart the application

AD12	0x80002D	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x80002E	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x80002F	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800031	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800032	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12		Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800033	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800034	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12		Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800035	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800036	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800038	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80003A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

AD12	0x80003B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80003C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80003E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x80003F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800030	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800041	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800042	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800043	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800044	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800045	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800046	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800047	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800048	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800049	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80004A	Unexpected Pointer or Variable Value		Redownload the board and restart the application

AD12	0x80004B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80004C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD12	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x80004F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800050	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800052	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800053	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x800054	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800055	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800056	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12		Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800057	Unused		Redownload the board and restart the application
AD12	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

AD12	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80005C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x80005D	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x80005E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80005F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800062	Internal MMDL Macro Error		Redownload the board and restart the application
AD12	0x800063	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800064	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD12	0x800065	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800066	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x800068	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x800069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD12	0x80006A	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x80006B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80006C	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x80006D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x80006E	Memory Error	Free Error	Redownload the board and restart the application
AD12		Memory Error	Free Error	Redownload the board and restart the application
AD12	0x80006F	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800070	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800071	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800072	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800073	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800074	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800075	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x800076	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800077	Unexpected Pointer or Variable Value		Redownload the board and restart the application

AD12	0x800078	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800079	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80007A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80007B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80007C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80007D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80007E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x80007F	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800080	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800081	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800082	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800083	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800084	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800085	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800086	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800087	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

AD12	0x800088	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD12	0x800089	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80008A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80008B	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x80008C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80008D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x80008E	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x80008F	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800090	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800091	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800092	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800093	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800094	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD12	0x800095	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x800096	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x800097	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application

AD12	0x800098	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x800099	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80009A	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80009B	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80009C	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80009D	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80009E	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD12	0x80009F	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD12	0x8000A0	Unused	Stream failure	Redownload the board and restart the application
AD12	0x8000A1	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x8000A2	Memory Error	Free Error	Redownload the board and restart the application
AD12	0x8000A3	Runtime kernel system call failure		Redownload the board and restart the application
AD12	0x8000A4	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x8000A5	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD12	0x8000A6	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD20	0x800000	Unused		

AD20	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x800002	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
AD20	0x800003	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x800004	Memory Error	Free Error	Redownload the board and restart the application
AD20	0x800005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x80000A	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x80000C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x80000D	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x800010	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD20	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800014	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x800015	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80001A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x80001B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD20	0x80001C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x80001D	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x80001E	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD20	0x80001F	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x800012	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application

AD20	0x800021	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x800022	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x800023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800024	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x800025	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x800026	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x800027	Memory Error	Free Error	Redownload the board and restart the application
AD20	0x800028	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x800029	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x80002A	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD20	0x80002B	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x80002C	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x80002D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80002E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80002F	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD20	0x800030	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application

AD20	0x800031	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800032	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x800033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800034	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x800035	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x800036	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800037	Memory Error	Free Error	Redownload the board and restart the application
AD20	0x800038	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20		Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800039	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80003A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80003B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80003C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x80003E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x80003F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD20	0x800030	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800043	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800044	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800045	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800046	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800047	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x800048	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x800049	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x80004A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80004B	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x80004C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80004D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80004E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80004F	Unexpected Pointer or Variable Value		Redownload the board and restart the application

AD20	0x800050	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD20	0x800051	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800052	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800053	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800054	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800059	Unused		
AD20	0x80005A	Unused		
AD20	0x80005B	Unused		
AD20	0x80005C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x80005D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x80005E	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x80005F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD20	0x800060	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800061	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800063	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800064	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800065	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800066	Internal MMDL Macro Error		Redownload the board and restart the application
AD20	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x800068	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD20	0x800069	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD20	0x80006A	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x80006B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD20	0x80006C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD20	0x80006D	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD20	0x80006E	Runtime kernel system call failure		Redownload the board and restart the application
AD20	0x80006F	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application

AD30	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800002	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800003	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x800004	Memory Error	Free Error	Redownload the board and restart the application
AD30	0x800005	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x80000A	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x80000C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80000D	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800010	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD30	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800014	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800015	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80001A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x80001B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD30	0x80001C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x80001D	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x80001E	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AD30	0x80001F	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x800012	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application

AD30	0x800021	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800022	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800024	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800025	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x800026	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x800027	Memory Error	Free Error	Redownload the board and restart the application
AD30	0x800028	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800029	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x80002A	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD30	0x80002B	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x80002C	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x80002D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80002E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80002F	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800030	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application

AD30	0x800031	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800032	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x800033	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x800034	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800035	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800036	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800037	Memory Error	Free Error	Redownload the board and restart the application
AD30	0x800038	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30		Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800039	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80003A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80003B	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x80003C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x80003E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x80003F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD30	0x800030	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800043	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800044	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800045	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800046	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800047	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800048	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x800049	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x80004A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80004B	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x80004C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80004D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80004E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80004F	Unexpected Pointer or Variable Value		Redownload the board and restart the application

AD30	0x800050	Unexpected Message or State Machine Error		Redownload the board and restart the application
AD30	0x800051	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800052	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800053	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800054	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800059	Unused		
AD30	0x80005A	Unused		
AD30	0x80005B	Unused		
AD30	0x80005C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x80005D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x80005E	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x80005F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AD30	0x800060	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800061	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800063	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800064	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800065	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800066	Internal MMDL Macro Error		Redownload the board and restart the application
AD30	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800068	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AD30	0x800069	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AD30	0x80006A	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x80006B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x80006C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AD30	0x80006D	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x80006E	Runtime kernel system call failure		Redownload the board and restart the application

AD30	0x80006F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800070	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AD30	0x800071	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800072	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AD30	0x800074	Unused		
AD30	0x800075	Unused		
AD30	0x800076	Runtime kernel system call failure		Redownload the board and restart the application
AD30	0x800077	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800000	Unused		
AE12	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800002	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800003	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
AE12	0x800004	Internal MMDL Macro Error		Redownload the board and restart the application
AE12	0x800005	Memory Error	Free Error	Redownload the board and restart the application
AE12	0x800006	Unexpected Message or State Machine Error		Redownload the board and restart the application

AE12	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800009	Memory Error	Stream failure	Redownload the board and restart the application
AE12	0x80000A	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80000C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80000E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800010	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800011	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800012	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800013	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800014	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800016	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

AE12	0x800017	Memory Error	Stream failure	Redownload the board and restart the application
AE12	0x800018	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x800019	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x80001A	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x80001B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x80001C	Memory Error	Free Error	Redownload the board and restart the application
AE12	0x80001D	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x80001E	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE12	0x80001F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800012	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x800021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800022	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800023	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application

AE12	0x800024	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800025	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE12	0x800026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800027	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800028	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800029	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE12	0x80002A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE12	0x80002B	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE12	0x80002C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x80002D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x80002E	Internal MMDL Macro Error		Redownload the board and restart the application
AE12	0x80002F	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800030	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800031	Memory Error	Free Error	Redownload the board and restart the application
AE12	0x800032	Unexpected Message or State Machine Error		Redownload the board and restart the application

AE12		value out of bounds		Redownload the board and restart the application
AE12	0x800033	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800034	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800035	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800036	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800038	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x800039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80003A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80003B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80003C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80003E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80003F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800041	Unexpected Pointer or Variable Value		Redownload the board and restart the application

AE12	0x800042	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE12		Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800043	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800044	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800045	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800046	Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12		Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE12	0x800048	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800049	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x80004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80004C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80004D	Internal MMDL Macro Error		Redownload the board and restart the application

AE12	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80004F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800050	Internal MMDL Macro Error		Redownload the board and restart the application
AE12	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x800052	Unused		
AE12	0x800053	Unused		
AE12	0x800054	Unused		
AE12	0x800055	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800056	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
AE12	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
AE12	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80005C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80005D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AE12		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x80005E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x80005F	Internal MMDL Macro Error		Redownload the board and restart the application
AE12	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE12	0x800062	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x800063	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE12	0x800064	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x800065	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x800066	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800068	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE12	0x800069	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x80006A	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12	0x80006B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

AE12	0x80006C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x80006D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x80006E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE12		Runtime kernel system call failure		Redownload the board and restart the application
AE12	0x80006F	Memory Error	Stream failure	Redownload the board and restart the application
AE12	0x800070	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE12	0x800071	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x800000	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800002	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
AE20	0x800003	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x800004	Memory Error	Free Error	Redownload the board and restart the application
AE20	0x800005	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AE20	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800009	Memory Error	Stream failure	Redownload the board and restart the application
AE20	0x80000A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80000B	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x80000C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x80000D	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800010	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800015	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

AE20	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x80001A	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x80001B	Memory Error	Stream failure	Redownload the board and restart the application
AE20	0x80001C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20		Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x80001D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x80001E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x80001F	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20		Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800012	Memory Error	Free Error	Redownload the board and restart the application
AE20	0x800021	Memory Error	Free Error	Redownload the board and restart the application
AE20	0x800022	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800023	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE20	0x800024	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

AE20	0x800025	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x800026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800027	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x800028	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x800029	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE20	0x80002A	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x80002B	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x80002C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x80002D	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE20	0x80002E	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE20	0x80002F	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800030	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800031	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x800032	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800034	Memory Error	Free Error	Redownload the board and restart the application

AE20	0x800035	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800036	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20		Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800037	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800038	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800039	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x80003A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80003B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80003C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80003D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80003E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80003F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x800030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800041	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x800042	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800043	Unexpected Pointer or Variable Value		Redownload the board and restart the application

AE20	0x800044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800045	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800046	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800048	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800049	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x80004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80004C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80004D	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80004F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800050	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x800052	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800053	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

AE20	0x800054	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x800055	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800056	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80005C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80005D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80005E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x80005F	Internal MMDL Macro Error		Redownload the board and restart the application
AE20	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE20	0x800062	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x800063	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

AE20	0x800064	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE20	0x800065	Runtime kernel system call failure		Redownload the board and restart the application
AE20	0x800066	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x800067	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE20	0x800068	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE20	0x800069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80006A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80006B	Memory Error	Stream failure	Redownload the board and restart the application
AE20	0x80006C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE20	0x80006D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x800000	Unused		Redownload the board and restart the application
AE30	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800002	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
AE30	0x800003	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x800004	Memory Error	Free Error	Redownload the board and restart the application
AE30	0x800005	Unexpected Message or State Machine Error		Redownload the board and restart the application

AE30	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800009	Memory Error	Stream failure	Redownload the board and restart the application
AE30	0x80000A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80000B	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x80000C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80000D	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800010	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800015	Runtime kernel system call failure		Redownload the board and restart the application

AE30	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x80001A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE30	0x80001B	Memory Error	Stream failure	Redownload the board and restart the application
AE30	0x80001C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30		Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x80001D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x80001E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x80001F	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30		Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800012	Memory Error	Free Error	Redownload the board and restart the application
AE30	0x800021	Memory Error	Free Error	Redownload the board and restart the application
AE30	0x800022	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800023	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application

AE30	0x800024	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800025	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800027	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800028	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800029	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
AE30	0x80002A	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30		Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80002B	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80002C	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80002D	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE30	0x80002E	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
AE30	0x80002F	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800030	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800031	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x800032	Unexpected Message or State Machine Error		Redownload the board and restart the application

AE30	0x800033	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800034	Memory Error	Free Error	Redownload the board and restart the application
AE30	0x800035	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800036	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30		Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800037	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800038	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800039	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80003A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80003B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80003C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80003D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80003E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80003F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x800030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800041	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

AE30	0x800042	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800043	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800045	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800046	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800048	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AE30	0x800049	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80004C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80004D	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80004F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800050	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

AE30	0x800052	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x800053	Unused		Redownload the board and restart the application
AE30	0x800054	Unused		Redownload the board and restart the application
AE30	0x800055	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800056	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80005C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80005D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80005E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
AE30	0x80005F	Internal MMDL Macro Error		Redownload the board and restart the application
AE30	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

AE30	0x800062	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800063	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800064	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x800065	Runtime kernel system call failure		Redownload the board and restart the application
AE30		Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800066	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800067	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800068	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x80006A	Unused		Redownload the board and restart the application
AE30	0x80006B	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x80006C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x80006D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
AE30	0x80006E	Unexpected Message or State Machine Error		Redownload the board and restart the application
AE30	0x80006F	Runtime kernel system call failure		Redownload the board and restart the application

AE30	0x800070	Runtime kernel system call failure		Redownload the board and restart the application
AE30	0x800071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800072	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AE30	0x800073	Memory Error	Stream failure	Redownload the board and restart the application
AP	800000	Unused		
AP	800001	Runtime kernel system call failure		Redownload the board and restart the application
AP	800002	Runtime kernel system call failure		Redownload the board and restart the application
AP	800003	Runtime kernel system call failure		Redownload the board and restart the application
AP	800004	Runtime kernel system call failure		Redownload the board and restart the application
AP	800005	Unused		
AP	800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AP	800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
AP	800008	Runtime kernel system call failure		Redownload the board and restart the application
AP	800009	Runtime kernel system call failure		Redownload the board and restart the application
AP	80000A	Runtime kernel system call failure		Redownload the board and restart the application
AP	80000B	Runtime kernel system call failure		Redownload the board and restart the application

AP	80000C	Runtime kernel system call failure		Redownload the board and restart the application
AP	80000D	Runtime kernel system call failure		Redownload the board and restart the application
AP	80000E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
AP	80000F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CSUMS	0x800000	Unused		Redownload the board and restart the application
CSUMS	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CSUMS	0x800003	Unexpected Message or State Machine Error		Redownload the board and restart the application
CSUMS	0x800004	Unexpected Message or State Machine Error		Redownload the board and restart the application
CSUMS	0x800005	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80000A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CSUMS	0x80000C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80000D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CSUMS	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x80000F	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CSUMS	0x800010	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x800011	Unexpected Message or State Machine Error		Redownload the board and restart the application
CSUMS	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x800013	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x800014	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x800015	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800017	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800018	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800019	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x80001A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80001B	Internal MMDL Macro Error		Redownload the board and restart the application

CSUMS	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80001D	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80001E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x80001F	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800012	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800021	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800022	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800023	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800024	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800025	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800026	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800027	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CSUMS	0x800028	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800029	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80002A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80002B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CSUMS	0x80002C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80002D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80002E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80002F	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800031	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800032	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800034	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800035	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800036	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800038	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80003A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80003B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CSUMS	0x80003C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80003D	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80003E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80003F	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800030	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800043	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800044	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800045	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800046	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x800047	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x800048	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CSUMS	0x800049	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80004A	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x80004B	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CSUMS	0x80004C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80004E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80004F	Memory Error	Stream failure	Redownload the board and restart the application
CSUMS	0x800050	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CSUMS	0x800051	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x800052	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x800053	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x800054	Unexpected Message or State Machine Error		Redownload the board and restart the application
CSUMS	0x800055	Unexpected Message or State Machine Error		Redownload the board and restart the application
CSUMS	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800057	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80005A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CSUMS	0x80005B	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80005C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80005D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80005E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80005F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800060	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800063	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800064	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800065	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800066	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800068	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800069	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x80006A	Runtime kernel system call failure		Redownload the board and restart the application

CSUMS	0x80006B	Runtime kernel system call failure		Redownload the board and restart the application
CSUMS	0x80006C	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80006D	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80006E	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80006F	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800070	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800072	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800073	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x800074	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800075	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800076	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x800077	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x800078	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800079	Memory Error	Free Error	Redownload the board and restart the application
CSUMS	0x80007A	Internal MMDL Macro Error		Redownload the board and restart the application

CSUMS	0x80007B	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80007C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CSUMS	0x80007D	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80007E	Internal MMDL Macro Error		Redownload the board and restart the application
CSUMS	0x80007F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CSUMS	0x800080	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800000	Unused		Redownload the board and restart the application
EFES	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800002	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800004	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES		Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x800005	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800006	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
EFES	0x800007	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800008	Unexpected Message or State Machine Error		Redownload the board and restart the application

EFES	0x800009	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x80000A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x80000B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x80000C	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
EFES	0x80000D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x80000E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x80000F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800010	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800013	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800015	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800017	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application

EFES	0x800019	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80001A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80001B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x80001C	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80001D	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80001E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80001F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800012	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800021	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800022	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x800023	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x800024	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x800025	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
EFES	0x800026	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800027	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800028	Memory Error	Free Error	Redownload the board and restart the application

EFES	0x800029	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80002A	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80002B	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80002C	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80002D	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80002E	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80002F	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800030	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800031	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800032	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800033	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800034	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800035	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800036	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800037	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800038	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

EFES	0x800039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x80003A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80003B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x80003C	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80003D	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80003E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x80003F	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800041	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800042	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800043	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800044	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800045	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800046	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800047	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800048	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

EFES	0x800049	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80004A	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80004B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80004C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x80004D	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80004E	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80004F	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800050	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800051	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800052	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800053	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800054	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800056	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

EFES	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x80005A	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80005B	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80005C	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80005D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80005E	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80005F	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800060	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800061	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800062	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800063	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800064	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800065	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800066	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x800067	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x800068	Runtime kernel system call failure		Redownload the board and restart the application

EFES	0x800069	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x80006A	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
EFES	0x80006B	Internal MMDL Macro Error		Redownload the board and restart the application
EFES	0x80006C	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80006D	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x80006E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80006F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800070	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800072	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800073	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800074	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800075	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800076	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800077	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800078	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

EFES	0x800079	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x80007A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80007B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80007C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80007D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80007E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80007F	Unused		
EFES	0x800080	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800081	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800082	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800083	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800084	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800085	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800086	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800087	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800088	Memory Error	Free Error	Redownload the board and restart the application

EFES	0x800089	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80008A	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80008B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x80008C	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80008D	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80008E	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x80008F	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x800090	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800091	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800092	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x800093	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x800094	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800095	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x800096	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x800097	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x800098	Unexpected Message or State Machine Error		Redownload the board and restart the application

EFES	0x800099	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x80009A	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x80009B	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x80009C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x80009D	Memory Error	Stream failure	Redownload the board and restart the application
EFES	0x80009E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x80009F	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000A0	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
EFES	0x8000A1	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
EFES	0x8000A2	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000A3	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x8000A4	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x8000A5	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000A6	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000A7	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x8000A8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

EFES	0x8000A9	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000AA	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000AB	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000AC	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x8000AD	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000AE	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000B0	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000B1	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000B2	Runtime kernel system call failure		Redownload the board and restart the application
EFES		Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x8000B3	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000B4	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000B5	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000B6	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

EFES	0x8000B7	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
EFES	0x8000B8	Runtime kernel system call failure		Redownload the board and restart the application
EFES	0x8000B9	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x8000BA	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x8000BB	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
EFES	0x8000BC	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000BD	Memory Error	Free Error	Redownload the board and restart the application
EFES	0x8000BE	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000BF	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000C0	Unexpected Pointer or Variable Value		Redownload the board and restart the application

EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000C1	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000C2	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000C3	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000C4	Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES		Unexpected Pointer or Variable Value		Redownload the board and restart the application
EFES	0x8000C5	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES		Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x8000C6	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES		Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x8000C7	Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES		Unexpected Message or State Machine Error		Redownload the board and restart the application
EFES	0x8000C8	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

EFES	0x8000C9	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000CA	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000CB	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000CC	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000CD	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000CE	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000CF	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
EFES	0x8000AF	Unused		Redownload the board and restart the application
ENC		Runtime kernel system call failure		Redownload the board and restart the application
ENC		Runtime kernel system call failure		Redownload the board and restart the application
ENC		Runtime kernel system call failure		Redownload the board and restart the application
ENC		Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
FM	0x800003	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x800004	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

FM	0x800005	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
FM	0x800006	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x800007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800008	Unexpected Pointer or Variable Value		Redownload the board and restart the application
FM	0x800009	Memory Error	Stream failure	Redownload the board and restart the application
FM	0x800010	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
FM	0x800011	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x800012	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x800013	Internal MMDL Macro Error		Redownload the board and restart the application
FM	0x800014	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800015	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800017	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x800018	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800019	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x800020	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

FM	0x800021	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800022	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x800023	Internal MMDL Macro Error		Redownload the board and restart the application
FM	0x800024	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x800025	Internal MMDL Macro Error		Redownload the board and restart the application
FM	0x800026	Internal MMDL Macro Error		Redownload the board and restart the application
FM	0x800027	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800028	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x800029	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800030	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
FM	0x800031	Internal MMDL Macro Error		Redownload the board and restart the application
FM	0x800032	Memory Error	Free Error	Redownload the board and restart the application
FM	0x800033	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x800034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

FM	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x800038	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x800039	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x80000A	Memory Error	Stream failure	Redownload the board and restart the application
FM	0x80000B	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x80000C	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
FM	0x80000D	Memory Error	Free Error	Redownload the board and restart the application
FM	0x80000E	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x80000F	Unexpected Message or State Machine Error		Redownload the board and restart the application
FM	0x80001A	Internal MMDL Macro Error		Redownload the board and restart the application
FM	0x80001B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x80001D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x80001E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x80001F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x80002A	Internal MMDL Macro Error		Redownload the board and restart the application

FM	0x80002B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FM	0x80002C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
FM	0x80002D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
FM	0x80002E	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x80002F	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x80003A	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x80003B	Runtime kernel system call failure		Redownload the board and restart the application
FM	0x80003C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FM	0x80003D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
GTD	0x800000	Unused		Redownload the board and restart the application
GTD	0x800001	value out of bounds		Redownload the board and restart the application
GTD	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800003	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800004	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800005	Unexpected Message or State Machine Error		Redownload the board and restart the application
GTD	0x800006	Unexpected Message or State Machine Error		Redownload the board and restart the application

GTD	0x800007	Unexpected Message or State Machine Error		Redownload the board and restart the application
GTD	0x800008	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800009	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800010	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800012	Unexpected Message or State Machine Error		Redownload the board and restart the application
GTD	0x800013	Unexpected Message or State Machine Error		Redownload the board and restart the application
GTD	0x800014	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
GTD	0x800015	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
GTD	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
GTD	0x800017	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
GTD	0x800018	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
GTD	0x800019	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MF	800000	Unused		Redownload the board and restart the application
R2MF	800001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MF	800002	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

R2MF	800003	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MF	800004	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MF	800005	Internal MMDL Macro Error		Redownload the board and restart the application
R2MF	800006	Internal MMDL Macro Error		Redownload the board and restart the application
R2MF	800007	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MF	800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MF	800009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MF	800010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MF	800011	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MF	800012	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MF	800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MF	80000A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MF	80000B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MF	80000C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MF	80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MF	80000E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

R2MF	80000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800000	Unused		
SC	800001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SC	800002	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800003	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800004	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800005	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800007	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	800008	Runtime kernel system call failure		Redownload the board and restart the application
SC	800009	Runtime kernel system call failure		Redownload the board and restart the application
SC	800010	Runtime kernel system call failure		Redownload the board and restart the application
SC	800011	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	800012	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
SC	800013	Internal MMDL Macro Error		Redownload the board and restart the application
SC	800014	Memory Error	Free Error	Redownload the board and restart the application

SC	800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SC	800016	Runtime kernel system call failure		Redownload the board and restart the application
SC	800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SC	800018	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800019	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	800020	Internal MMDL Macro Error		Redownload the board and restart the application
SC	800021	Internal MMDL Macro Error		Redownload the board and restart the application
SC	800022	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800023	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	800024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	800025	Internal MMDL Macro Error		Redownload the board and restart the application
SC	800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	800027	Internal MMDL Macro Error		Redownload the board and restart the application
SC		Internal MMDL Macro Error		Redownload the board and restart the application
SC	800028	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

SC	800029	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	80000A	Unused		
SC	80000B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SC	80000C	Runtime kernel system call failure		Redownload the board and restart the application
SC	80000D	Runtime kernel system call failure		Redownload the board and restart the application
SC	80000E	Internal MMDL Macro Error		Redownload the board and restart the application
SC	80000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	80001A	Internal MMDL Macro Error		Redownload the board and restart the application
SC	80001B	Internal MMDL Macro Error		Redownload the board and restart the application
SC	80001C	Internal MMDL Macro Error		Redownload the board and restart the application
SC	80001D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
SC	80001E	Internal MMDL Macro Error		Redownload the board and restart the application
SC	80001F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SC	80002A	Memory Error	Free Error	Redownload the board and restart the application
SC	80002B	Memory Error	Free Error	Redownload the board and restart the application
SC	80002C	Memory Error	Free Error	Redownload the board and restart the application

WA	0x800000	Unused		
WA	0x800000	Unused		
WA	0x800001	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800001	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800002	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800002	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800003	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800003	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800004	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800004	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800005	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800005	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800006	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800006	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800007	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800007	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application

WA	0x800008	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800008	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800009	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800009	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x800010	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA	0x800010	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA	0x800011	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x800011	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x800013	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA	0x800013	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA	0x800014	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800014	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800015	Unused		

WA	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800020	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800020	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800021	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800021	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800022	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800022	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

WA	0x800024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800025	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800025	Unused		
WA	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x800027	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800027	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800028	value out of bounds		Redownload the board and restart the application
WA	0x800028	value out of bounds		Redownload the board and restart the application
WA	0x800029	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800029	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800030	Unused		Redownload the board and restart the application
WA	0x800031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

WA	0x800032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x800032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x800033	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800033	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800034	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800034	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800036	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x800036	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x800037	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800037	Unused		Redownload the board and restart the application
WA	0x800038	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800038	Unused		Redownload the board and restart the application
WA	0x800039	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800039	Unused		Redownload the board and restart the application

WA	0x800040	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800040	Unused		
WA	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800042	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800042	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800043	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800043	Unused		
WA	0x800044	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800044	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800045	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800045	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800046	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800046	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x800047	Unused		

WA	0x800048	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800048	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x800049	value out of bounds		Redownload the board and restart the application
WA	0x800049	value out of bounds		Redownload the board and restart the application
WA	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800051	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x800051	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x800052	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800052	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800053	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x800053	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x800054	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800054	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800055	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800055	Unexpected Message or State Machine Error		Redownload the board and restart the application

WA	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800057	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800057	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800058	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x800058	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800060	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800060	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800061	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800061	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x800063	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800063	Unexpected Message or State Machine Error		Redownload the board and restart the application

WA	0x800064	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800064	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800065	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800065	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800066	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800066	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800067	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800067	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800068	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800068	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800069	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x800069	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80000A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x80000A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

WA	0x80000C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80000C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80001A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x80001A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA	0x80001B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80001B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80001D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80001D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

WA	0x80001E	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA	0x80001E	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA	0x80001F	Memory Error	Free Error	Redownload the board and restart the application
WA	0x80001F	Memory Error	Free Error	Redownload the board and restart the application
WA	0x80002A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80002A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80002B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80002B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80002C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80002C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80002D	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x80002D	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA	0x80002E	value out of bounds		Redownload the board and restart the application
WA	0x80002E	Unused		
WA	0x80002F	value out of bounds		Redownload the board and restart the application
WA	0x80002F	value out of bounds		Redownload the board and restart the application

WA	0x80003A	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80003A	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80003B	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80003B	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80003C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80003C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80003E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80003E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80003F	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80003F	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

WA	0x80004C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80004C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA	0x80004F	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80004F	Runtime kernel system call failure		Redownload the board and restart the application
WA	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80005C	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x80005C	Internal MMDL Macro Error		Redownload the board and restart the application
WA	0x80005D	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80005D	Unexpected Message or State Machine Error		Redownload the board and restart the application

WA	0x80005E	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80005E	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80005F	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80005F	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80006A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80006A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA	0x80006B	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80006B	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80006C	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80006C	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA	0x80006D	Unused		
WA	0x80006E	Unused		
WA	0x80006F	Unused		
WA480	0x800000	Unused		
WA480	0x800001	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800002	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application

WA480	0x800003	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480		Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800004	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800005	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800006	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800007	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800008	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800009	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x800010	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA480	0x800011	Runtime kernel system call failure		Redownload the board and restart the application
WA480	0x800012	Runtime kernel system call failure		Redownload the board and restart the application
WA480	0x800013	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA480	0x800014	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application

WA480	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800020	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800021	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800022	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800025	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x800027	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x800028	value out of bounds		Redownload the board and restart the application
WA480	0x800029	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800030	value out of bounds		Redownload the board and restart the application
WA480	0x800031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x800033	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

WA480	0x800034	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x800035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800036	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x800037	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800038	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800039	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800040	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800042	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800043	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480		Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800044	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800045	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x800046	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800048	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

WA480	0x800049	value out of bounds		Redownload the board and restart the application
WA480	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800051	Internal MMDL Macro Error		Redownload the board and restart the application
WA480	0x800052	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800053	Internal MMDL Macro Error		Redownload the board and restart the application
WA480	0x800054	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800055	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800057	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800058	Internal MMDL Macro Error		Redownload the board and restart the application
WA480	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800060	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800061	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800063	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800064	Unexpected Message or State Machine Error		Redownload the board and restart the application

WA480	0x800065	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800066	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800067	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800068	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800069	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x800070	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800071	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800072	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800073	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x800074	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x800075	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x800076	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800077	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800078	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x800079	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x80000A	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application

WA480	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80000C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80000E	Runtime kernel system call failure		Redownload the board and restart the application
WA480	0x80000F	Runtime kernel system call failure		Redownload the board and restart the application
WA480	0x80001A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WA480	0x80001B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x80001D	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x80001E	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
WA480	0x80001F	Memory Error	Free Error	Redownload the board and restart the application
WA480	0x80002A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x80002B	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x80002C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x80002D	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WA480	0x80002E	value out of bounds		Redownload the board and restart the application

WA480	0x80002F	value out of bounds		Redownload the board and restart the application
WA480	0x80003A	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80003B	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80003C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80003D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80003E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80003F	Runtime kernel system call failure		Redownload the board and restart the application
WA480	0x80004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x80004C	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WA480	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80004E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x80004F	Runtime kernel system call failure		Redownload the board and restart the application
WA480	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
WA480	0x80005B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80005C	Internal MMDL Macro Error		Redownload the board and restart the application

WA480	0x80005D	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80005E	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80005F	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80006A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80006B	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80006C	Unexpected Message or State Machine Error		Redownload the board and restart the application
WA480	0x80006D	Unused		
WA480	0x80006E	Unused		
WA480	0x80006F	Unused		
WA480	0x80007a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80007b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WA480	0x80007c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WA480	0x80007d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WGEN	800000	Unused		
WGEN	800001	Runtime kernel system call failure		Redownload the board and restart the application
WGEN	800002	Memory Error	Free Error	Redownload the board and restart the application

WGEN	800003	Unexpected Message or State Machine Error		Redownload the board and restart the application
WGEN	800004	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800006	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800007	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800008	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800009	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800010	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800012	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800013	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WGEN	800014	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800015	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800016	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800017	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800018	Memory Error	Free Error	Redownload the board and restart the application

WGEN	800019	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800020	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800022	Runtime kernel system call failure		Redownload the board and restart the application
WGEN	800023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800024	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WGEN	800025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WGEN	800026	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WGEN	800027	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
WGEN	800028	Unexpected Message or State Machine Error		Redownload the board and restart the application
WGEN	800029	Unexpected Message or State Machine Error		Redownload the board and restart the application
WGEN	800030	Unexpected Message or State Machine Error		Redownload the board and restart the application
WGEN	800031	Unexpected Message or State Machine Error		Redownload the board and restart the application
WGEN	800032	Runtime kernel system call failure		Redownload the board and restart the application
WGEN	800033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	800034	Runtime kernel system call failure		Redownload the board and restart the application

WGEN	800035	Memory Error	Free Error	Redownload the board and restart the application
WGEN	800036	Memory Error	Free Error	Redownload the board and restart the application
WGEN	80000A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	80000B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	80000C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	80000D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	80000E	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WGEN	80000F	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
WGEN	80001A	Memory Error	Free Error	Redownload the board and restart the application
WGEN	80001B	Memory Error	Free Error	Redownload the board and restart the application
WGEN	80001C	Memory Error	Free Error	Redownload the board and restart the application
WGEN	80001D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WGEN	80001E	Runtime kernel system call failure		Redownload the board and restart the application
WGEN	80001F	Memory Error	Free Error	Redownload the board and restart the application
WGEN	80002A	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
WGEN	80002B	Unexpected Pointer or Variable Value		Redownload the board and restart the application

WGEN	80002C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
WGEN	80002D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	80002E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
WGEN	80002F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
		Media		
Resource	Loc Hex	Error Class	Error Subclass	Action to Be Taken
CID	0x800001	Unused		
CID	0x800002	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800003	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800004	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800005	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800006	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800007	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800008	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800009	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CID	0x800010	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800011	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800012	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800013	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800014	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800015	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800016	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800017	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800018	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800019	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800020	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800021	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800022	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800023	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800024	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CID	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800027	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800028	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800029	Unexpected Message or State Machine Error		Redownload the board and restart the application
CID	0x800030	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800031	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800033	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800034	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800035	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800036	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800038	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800040	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800041	Internal MMDL Macro Error		Redownload the board and restart the application

CID	0x800042	Runtime kernel system call failure		Redownload the board and restart the application
CID	0x800043	Runtime kernel system call failure		Redownload the board and restart the application
CID	0x800044	Runtime kernel system call failure		Redownload the board and restart the application
CID	0x800045	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800046	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800047	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800048	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800049	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800050	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800052	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800053	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800054	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800056	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800057	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CID	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800063	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800064	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800065	Runtime kernel system call failure		Redownload the board and restart the application
CID	0x800066	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800068	Runtime kernel system call failure		Redownload the board and restart the application
CID	0x800069	Runtime kernel system call failure		Redownload the board and restart the application
CID	0x800070	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CID	0x800071	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800072	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CID	0x800074	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800075	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CID	0x800076	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CID	0x800077	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800078	Unexpected Message or State Machine Error		Redownload the board and restart the application
CID	0x800079	Unexpected Message or State Machine Error		Redownload the board and restart the application
CID	0x800080	Memory Error	Free Error	Redownload the board and restart the application
CID	0x800081	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800082	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800083	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800084	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800085	Internal MMDL Macro Error		Redownload the board and restart the application
CID	0x800086	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800087	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800088	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800089	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CID	0x800090	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800091	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800092	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800093	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800094	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800095	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800096	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800097	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800098	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CID	0x800099	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CID	0x800100	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800000	Unused		Redownload the board and restart the application
CONF	0x800001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800002	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800003	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800004	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800005	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800006	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800007	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800008	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CONF	0x800009	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800010	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800011	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CONF	0x800012	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800013	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800014	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800015	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800017	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800018	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CONF	0x800019	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800020	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800021	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800022	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800024	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800026	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800027	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800028	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CONF	0x800029	Unused		Redownload the board and restart the application
CONF	0x800030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CONF	0x800031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800032	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800037	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800038	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800039	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800040	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800041	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800042	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800043	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800044	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800045	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800046	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800047	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800048	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800049	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800050	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800051	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800052	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800053	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800054	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800055	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CONF	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800060	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800061	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800062	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800063	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800064	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800065	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800066	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800067	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800068	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800070	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800072	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800074	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800075	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800076	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800077	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800078	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800079	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800080	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800081	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800082	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800083	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800084	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800085	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800086	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800087	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800088	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800089	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800090	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800091	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800092	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800093	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800094	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800095	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800096	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800097	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800098	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800099	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800100	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CONF	0x800101	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800102	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800103	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800104	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800105	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800106	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CONF	0x800107	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CONF	0x800108	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800109	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800113	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800114	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CONF	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800116	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800117	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800118	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
CONF	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800121	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800122	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800123	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800124	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800126	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800127	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800128	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800129	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800130	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800132	Memory Error	Free Error	Redownload the board and restart the application

CONF	0x800133	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800134	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800135	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800136	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800138	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800139	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800140	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800141	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800142	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800143	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800144	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800145	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800146	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800147	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800148	Memory Error	Free Error	Redownload the board and restart the application

CONF	0x800149	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800150	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800151	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800152	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800153	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800154	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800155	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800156	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800157	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800158	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800158	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800159	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800160	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800161	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800162	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800163	Runtime kernel system call failure		Redownload the board and restart the application

CONF	0x800164	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CONF	0x800165	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CONF	0x800165	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CONF	0x800166	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800166	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800167	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800167	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800168	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800168	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800169	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800169	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800170	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800171	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800172	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800173	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800174	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CONF	0x800175	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800176	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800177	Unused		Redownload the board and restart the application
CONF	0x800178	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800179	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800180	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800181	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800182	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800183	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800184	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800185	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800186	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800187	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800188	Unused		Redownload the board and restart the application
CONF	0x800189	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800190	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800191	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800192	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800193	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800194	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800195	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800196	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800197	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800198	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800199	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800200	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800201	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800202	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800203	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800204	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CONF	0x800205	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CONF	0x800206	Runtime kernel system call failure		Redownload the board and restart the application

CONF	0x800207	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800208	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800209	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800210	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800211	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800212	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800213	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800214	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800215	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800216	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800217	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800218	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800219	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CONF	0x800220	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800221	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800222	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CONF	0x800223	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800224	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800225	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800226	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800227	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800228	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800229	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800230	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800231	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800232	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800233	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800234	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800235	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800236	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800237	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800238	Memory Error	Free Error	Redownload the board and restart the application

CONF	0x800239	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800240	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800241	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800242	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800243	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800244	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800245	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800246	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800247	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800248	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800249	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800250	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800251	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800252	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800253	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800254	Memory Error	Free Error	Redownload the board and restart the application

CONF	0x800255	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800256	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800257	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800258	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800259	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800260	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800261	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800262	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800263	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800264	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800265	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800266	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800267	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800268	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800269	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800270	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800271	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800272	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800273	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800274	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800275	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800276	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800277	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800278	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800279	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800280	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800281	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800282	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800283	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800284	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800285	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800286	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800287	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800288	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800289	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800290	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800291	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800292	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800293	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800294	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800295	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800296	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800297	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800298	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800299	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800300	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800301	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800302	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800303	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800304	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800305	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800306	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800307	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800308	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800309	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800310	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800311	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800312	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800313	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800314	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800315	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800316	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800317	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800318	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800319	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800320	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800321	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800322	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800323	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800324	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800325	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800326	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800327	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800328	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800329	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800330	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CONF	0x800331	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800332	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800333	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800334	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800335	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800336	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800337	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800338	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800339	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800340	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800341	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800342	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800343	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800344	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800345	Unexpected Message or State Machine Error		Save logs and continue running
CONF	0x800346	Unexpected Message or State Machine Error		Redownload the board and restart the application
CONF	0x800347	Unexpected Message or State Machine Error		Save logs and continue running
CONF	0x800348	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800349	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800350	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800351	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800352	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800353	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800354	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800355	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800356	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800357	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800358	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800359	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800360	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800361	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800362	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800363	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800364	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800365	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800366	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800367	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800368	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800369	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800370	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800371	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800372	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800373	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800374	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800375	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800376	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800377	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800378	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800379	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800380	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800381	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800382	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800383	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800384	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800385	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800386	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800387	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800388	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800389	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800390	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800391	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800392	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800393	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800394	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800395	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800396	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800397	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800398	Memory Error	Free Error	Redownload the board and restart the application

CONF	0x800399	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800400	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800401	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800402	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800403	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800404	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800405	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800406	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800407	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800408	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800409	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800410	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800411	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800412	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800413	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800414	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800415	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800416	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800417	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800418	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800419	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800420	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800421	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800422	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800423	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800424	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800425	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800426	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800427	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800428	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800429	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800430	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800431	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800432	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800433	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800434	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800435	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800436	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800437	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800438	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800439	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800440	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800441	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800442	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800443	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800444	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800445	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800446	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800447	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800448	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800449	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800450	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800451	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800452	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800453	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800454	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800455	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800456	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800457	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800458	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800459	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800460	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800461	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800462	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CONF	0x800463	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800464	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800465	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800466	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800467	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800468	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800469	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800470	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800471	Unused		Redownload the board and restart the application
CONF	0x800472	Unused		Redownload the board and restart the application
CONF	0x800473	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800474	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800475	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800476	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800477	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800478	Internal MMDL Macro Error		Redownload the board and restart the application

CONF	0x800479	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800480	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800481	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800482	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800483	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800484	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800485	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800486	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CONF	0x800487	Internal MMDL Macro Error		Redownload the board and restart the application
CONF	0x800488	Runtime kernel system call failure		Redownload the board and restart the application
CONF	0x800489	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF	0x800490	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CONF	0x800491	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CONF	0x800492	Memory Error	Free Error	Redownload the board and restart the application
CONF	0x800493	Internal MMDL Macro Error		Redownload the board and restart the application
CONF		Memory Error	Free Error	Redownload the board and restart the application

CONF		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CONF		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800000	Unused		Redownload the board and restart the application
FEP	0x800001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800002	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800003	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800004	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800005	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800006	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800007	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800009	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800010	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800011	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800012	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

FEP	0x800014	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800015	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800017	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800018	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800019	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800020	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800021	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800022	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800023	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800025	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800027	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800028	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800029	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

FEP	0x800030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800031	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800032	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800033	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800034	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800036	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800037	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800038	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800040	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800041	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800042	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800043	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800044	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800045	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

FEP	0x800046	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800047	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800048	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800049	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800052	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800053	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800054	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800055	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800057	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800058	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800059	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800060	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800061	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application

FEP	0x800062	Runtime kernel system call failure	Clustering Error, Stream Failure	Redownload the board and restart the application
FEP	0x800063	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800064	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800065	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800066	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800068	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800070	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800071	Memory Error	Stream failure	Redownload the board and restart the application
FEP	0x800072	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
FEP	0x800073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800074	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800075	Unused	Clustering Error	Redownload the board and restart the application
FEP	0x800076	Unused	Clustering Error	Redownload the board and restart the application
FEP	0x800077	Unused	Clustering Error	Redownload the board and restart the application

FEP	0x800078	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800079	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800080	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800081	Memory Error	Stream failure	Redownload the board and restart the application
FEP	0x800082	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
FEP	0x800083	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800084	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800085	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800086	Unexpected Message or State Machine Error		Redownload the board and restart the application
FEP	0x800087	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800088	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800089	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800090	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800091	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800092	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800093	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

FEP	0x800094	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800095	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800096	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800097	Runtime kernel system call failure	Clustering Error, Stream Failure	Redownload the board and restart the application
FEP	0x800098	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800099	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800100	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800101	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800102	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800103	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800104	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800106	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800107	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800108	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800109	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800110	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800111	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800112	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800114	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800115	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800116	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800117	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800118	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800119	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800120	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800121	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800122	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800123	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800124	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800125	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800126	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800127	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800128	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800129	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800130	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800131	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800132	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800133	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800134	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800135	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800136	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800137	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800138	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800139	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800140	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800141	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

FEP	0x800142	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800143	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800144	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800145	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800146	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800147	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800148	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800149	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
FEP	0x800150	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800151	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800152	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800153	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800154	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800155	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800156	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800157	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800158	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800159	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800160	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800161	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800162	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800163	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800164	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800165	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800166	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800167	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800168	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800169	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800170	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800171	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800172	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800173	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800174	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800175	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800176	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800177	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800178	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800179	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800180	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800181	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800182	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800183	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800184	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800185	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800186	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800187	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800188	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800189	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

FEP	0x800190	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800191	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800192	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800193	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800194	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800195	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800196	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800197	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800198	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800199	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800200	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800201	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800202	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800203	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800204	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800205	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800206	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800207	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800208	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800209	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800210	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800211	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800212	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800213	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800214	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800215	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800216	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800217	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800251	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800252	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800253	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800254	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

FEP	0x800255	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800256	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800257	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
FEP	0x800258	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800259	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800260	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800261	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800262	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800263	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800264	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800265	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800266	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800267	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800268	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800269	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800270	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800271	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800272	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800273	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800274	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800275	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
FEP	0x800276	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800277	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800278	Runtime kernel system call failure		Redownload the board and restart the application
FEP	0x800279	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800280	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800281	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800282	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800283	Memory Error	Free Error	Redownload the board and restart the application
FEP	0x800284	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800285	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800286	Internal MMDL Macro Error		Redownload the board and restart the application

FEP	0x800287	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP	0x800288	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800289	Internal MMDL Macro Error		Redownload the board and restart the application
FEP	0x800290	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP	0x800291	Internal MMDL Macro Error		Redownload the board and restart the application
FEP		Internal MMDL Macro Error		Save logs and continue running
FEP		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
FEP		Runtime kernel Failure while sending a Message		Save logs and continue running
FEP		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
FEP		Runtime kernel system call failure		Redownload the board and restart the application
FEP		Runtime kernel system call failure		Redownload the board and restart the application
FEP		Unexpected Message or State Machine Error		Save logs and continue running
FEP		Unexpected Message or State Machine Error		Save logs and continue running
FEP		Unexpected Message or State Machine Error		Save logs and continue running

PLAY	0x800000	Unused		
PLAY	0x800001	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800002	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800003	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800004	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800005	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800006	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800007	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800008	Unexpected Message or State Machine Error		Redownload the board and restart the application
PLAY	0x800009	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800010	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800011	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800012	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800014	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800015	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application

PLAY	0x800016	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800017	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800018	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800019	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800020	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800021	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800022	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800024	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800025	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800026	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800027	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800028	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800029	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800030	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

PLAY	0x800032	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800033	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800034	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800035	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800036	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800038	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800040	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800043	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800044	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800045	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800046	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800047	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

PLAY	0x800048	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800049	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800051	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800052	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800053	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800054	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800055	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800057	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800059	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800060	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800061	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800062	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800063	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

PLAY	0x800064	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800065	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800066	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800067	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800068	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800069	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800070	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800072	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800074	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800075	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800076	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800077	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800078	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800079	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800080	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800081	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800082	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800083	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800084	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800085	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800086	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800087	Memory Error	Free Error	Redownload the board and restart the application
PLAY	0x800088	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800089	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800090	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800091	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800092	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800093	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800094	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800095	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

PLAY	0x800096	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
PLAY	0x800097	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800098	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800099	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800100	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800101	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800102	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800103	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800104	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800106	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800109	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800110	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800111	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

PLAY	0x800112	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800114	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800115	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800117	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800120	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800121	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800122	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800123	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800124	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800126	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800128	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800129	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800130	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800132	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800133	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800134	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800135	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800136	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800138	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800139	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800140	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800141	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800142	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800143	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

PLAY	0x800144	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800145	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800146	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800147	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
PLAY	0x800148	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800149	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800150	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800151	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800152	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800153	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800154	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800155	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800156	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800157	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800158	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800159	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800160	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800161	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800162	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800163	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800164	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800165	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
PLAY	0x800166	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800167	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800168	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800169	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800170	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800171	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800172	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800173	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800174	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800175	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800176	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800177	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800178	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800179	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800180	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800181	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800182	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800183	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800184	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800185	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800186	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800187	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800188	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800189	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800190	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800191	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

PLAY	0x800192	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800193	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800194	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800195	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800196	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800197	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800198	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800199	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800200	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800201	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800202	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800203	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800204	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800205	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800206	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800207	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

PLAY	0x800208	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800209	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800210	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800211	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800212	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800213	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800214	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800215	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800216	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800217	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800218	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800219	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800220	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800221	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800222	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800223	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800224	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800225	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800226	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800227	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800228	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800229	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800230	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800231	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800232	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800233	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800234	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800235	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800236	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800237	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800238	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800239	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800240	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800241	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800242	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800243	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800244	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800245	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800246	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800247	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800248	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800249	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800250	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800251	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800252	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800253	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800254	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800255	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

PLAY	0x800256	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800257	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800258	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800259	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800260	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800261	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800262	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800263	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800264	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800265	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800266	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800267	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800268	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800269	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800270	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800271	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800272	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800273	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800274	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800275	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800276	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800277	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800278	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800279	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800280	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800281	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800282	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800283	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800284	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800285	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800286	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800287	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800288	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800289	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800290	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800291	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800292	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800293	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800294	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800295	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800296	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800297	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800298	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800299	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800300	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800301	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800302	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800303	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800304	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800305	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800306	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800307	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800308	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800309	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800310	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800311	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800312	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800313	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800314	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800315	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800316	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800317	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800318	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800319	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800320	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800321	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800322	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800323	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800324	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800325	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800326	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800327	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800328	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800329	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800330	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800331	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800332	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800333	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800334	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800335	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

PLAY	0x800336	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800337	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800338	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800339	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800340	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800341	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800342	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800343	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800344	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800345	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800346	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800347	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800348	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800349	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800350	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800351	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800352	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800353	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800354	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800355	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800356	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800357	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800358	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800359	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800360	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800361	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800362	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800363	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800364	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800365	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800366	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800367	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800368	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800369	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800370	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800371	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800372	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800373	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800374	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800375	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800376	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800377	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800378	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800379	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800380	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800381	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800382	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800383	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800384	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800385	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800386	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800387	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800388	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800389	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800390	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800391	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800392	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800393	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800394	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800395	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800396	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800397	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800398	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800399	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800400	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800401	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800402	Runtime kernel system call failure		Redownload the board and restart the application
PLAY	0x800403	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800404	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800405	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800406	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800407	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800408	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800409	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800410	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800411	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800412	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800413	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800414	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800415	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

PLAY	0x800416	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800417	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800418	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800419	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800420	Unused	Stream failure	Redownload the board and restart the application
PLAY	0x800421	Unused	Stream failure	Redownload the board and restart the application
PLAY	0x800422	Unused		Redownload the board and restart the application
PLAY	0x800423	Unexpected Pointer or Variable Value		Redownload the board and restart the application
PLAY	0x800424	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
PLAY	0x800425	Unused	Stream failure	Redownload the board and restart the application
PLAY	0x800426	Unused	Stream failure	Redownload the board and restart the application
PLAY	0x800427	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800428	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800429	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800430	Internal MMDL Macro Error		Redownload the board and restart the application
PLAY	0x800431	Internal MMDL Macro Error		Redownload the board and restart the application

PLAY	0x800432	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY	0x800433	Unexpected Message or State Machine Error		Save logs and continue running
PLAY	0x800434	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY	0x800435	Internal MMDL Macro Error		Save logs and continue running
PLAY	0x800436	Runtime kernel Failure while sending a Message		Save logs and continue running
PLAY	0x800437	Unexpected Message or State Machine Error		Save logs and continue running
PLAY	0x800438	Unexpected Message or State Machine Error		Save logs and continue running
PLAY	0x800439	Unexpected Message or State Machine Error		Save logs and continue running
PLAY		Internal MMDL Macro Error		Redownload the board and restart the application
PLAY		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
PLAY		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
PLAY		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800000	Unused		Redownload the board and restart the application
R2MFP	0x800001	Runtime kernel system call failure		Redownload the board and restart the application

R2MFP	0x800002	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
R2MFP	0x800003	Memory Error	Free Error	Redownload the board and restart the application
R2MFP	0x800004	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800005	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800006	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800007	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800008	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800009	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800010	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
R2MFP	0x800011	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MFP	0x800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MFP	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MFP	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
R2MFP	0x800016	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800017	Memory Error	Free Error	Redownload the board and restart the application

R2MFP	0x800018	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800019	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800020	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800021	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800022	Memory Error	Free Error	Redownload the board and restart the application
R2MFP	0x800023	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800024	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800025	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800027	Memory Error	Free Error	Redownload the board and restart the application
R2MFP	0x800028	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800029	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800030	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800031	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800032	Memory Error	Free Error	Redownload the board and restart the application
R2MFP	0x800033	Unexpected Message or State Machine Error		Redownload the board and restart the application

R2MFP	0x800034	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800035	Internal MMDL Macro Error	Stream failure	Redownload the board and restart the application
R2MFP	0x800036	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800037	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800038	Runtime kernel system call failure		Redownload the board and restart the application
R2MFP	0x800039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800040	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800041	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800043	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800044	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800045	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800046	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800047	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800048	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800049	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

R2MFP	0x800050	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800051	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800052	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800053	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800054	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
R2MFP	0x800055	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
R2MFP	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800057	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
R2MFP	0x800058	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800060	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800061	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800062	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800063	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800064	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800065	Internal MMDL Macro Error		Redownload the board and restart the application

R2MFP	0x800066	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800067	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800068	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800069	Internal MMDL Macro Error	Stream failure	Redownload the board and restart the application
R2MFP	0x800070	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800071	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800072	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800073	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800074	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800075	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800076	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800077	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800078	Unused		Redownload the board and restart the application
R2MFP	0x800079	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800080	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800081	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

R2MFP	0x800082	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800083	Unused		Redownload the board and restart the application
R2MFP	0x800084	Unused		Redownload the board and restart the application
R2MFP	0x800085	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800086	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800087	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800088	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800089	Unused		Redownload the board and restart the application
R2MFP	0x800090	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800091	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800092	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800093	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800094	Unused		Redownload the board and restart the application
R2MFP	0x800095	Unused		Redownload the board and restart the application
R2MFP	0x800096	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800097	Internal MMDL Macro Error		Redownload the board and restart the application

R2MFP	0x800098	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800099	Unused		Redownload the board and restart the application
R2MFP	0x800100	Unexpected Message or State Machine Error		Redownload the board and restart the application
R2MFP	0x800102	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800103	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800104	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800106	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800108	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800109	Internal MMDL Macro Error		Redownload the board and restart the application
R2MFP	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
R2MFP	0x800113	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800114	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

R2MFP	0x800115	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
R2MFP	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800000	Unused		Redownload the board and restart the application
RECORD	0x800001	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800002	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800003	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800004	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800005	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
RECORD	0x800006	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800007	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800008	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800010	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800011	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application

RECORD	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800015	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800017	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800018	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800019	Unexpected Message or State Machine Error		Redownload the board and restart the application
RECORD	0x800020	Unexpected Message or State Machine Error		Redownload the board and restart the application
RECORD	0x800021	Memory Error	Free Error	Redownload the board and restart the application
RECORD	0x800022	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800024	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800025	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800026	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800027	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800028	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800029	Internal MMDL Macro Error		Redownload the board and restart the application

RECORD	0x800030	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800032	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800033	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800034	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800035	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800036	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800038	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800040	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800041	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800043	Memory Error	Free Error	Redownload the board and restart the application
RECORD	0x800044	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800045	Internal MMDL Macro Error		Redownload the board and restart the application

RECORD	0x800046	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800047	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800048	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800049	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800051	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800052	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800053	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800054	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800056	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800057	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800059	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800060	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

RECORD	0x800062	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800063	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800064	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800065	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800066	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800067	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800068	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800069	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800070	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800071	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800072	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800073	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800074	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800075	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800076	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800077	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

RECORD	0x800078	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800079	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800080	Unexpected Message or State Machine Error		Redownload the board and restart the application
RECORD	0x800081	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800082	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800083	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800084	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800085	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800086	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800087	Unused		Redownload the board and restart the application
RECORD	0x800088	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800089	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800090	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800091	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800092	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800093	Internal MMDL Macro Error		Redownload the board and restart the application

RECORD	0x800094	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800095	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800096	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800097	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800098	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800099	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800100	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800101	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800102	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800103	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800104	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800105	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800106	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800108	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800109	Internal MMDL Macro Error		Redownload the board and restart the application

RECORD	0x800110	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800111	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800112	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800113	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800114	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800115	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800116	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800117	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800118	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800121	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800122	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800123	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800124	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800125	Internal MMDL Macro Error		Redownload the board and restart the application

RECORD	0x800126	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800128	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800129	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800130	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800131	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800132	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800133	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800134	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800135	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800136	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800137	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800138	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800139	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800140	Runtime kernel system call failure		Redownload the board and restart the application
RECORD	0x800141	Internal MMDL Macro Error		Redownload the board and restart the application

RECORD	0x800142	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
RECORD	0x800143	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800144	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800145	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800146	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800147	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800148	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800149	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800150	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800151	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800152	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800153	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800154	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800155	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800156	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800157	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

RECORD	0x800158	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800159	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800160	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800161	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800162	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800163	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800164	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800165	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800166	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800167	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800168	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800169	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800170	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800171	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800172	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800173	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

RECORD	0x800174	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800175	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800176	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800177	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800178	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800179	Unexpected Message or State Machine Error	Stream failure	Save logs and continue running
RECORD	0x800180	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800181	Unexpected Message or State Machine Error		Redownload the board and restart the application
RECORD	0x800182	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800183	Unexpected Message or State Machine Error		Redownload the board and restart the application
RECORD	0x800184	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800185	Unexpected Pointer or Variable Value	Stream failure	Save logs and continue running
RECORD	0x800186	Unexpected Message or State Machine Error	Clustering Error	Save logs and continue running
RECORD	0x800187	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800188	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800189	Unexpected Message or State Machine Error		Save logs and continue running

RECORD	0x800190	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800191	Unused		Redownload the board and restart the application
RECORD	0x800192	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800193	Unused		Redownload the board and restart the application
RECORD	0x800194	Unused		Redownload the board and restart the application
RECORD	0x800195	Unused		Redownload the board and restart the application
RECORD	0x800196	Unexpected Pointer or Variable Value	Clustering Error, Stream Failure	Save logs and continue running
RECORD	0x800197	Unexpected Pointer or Variable Value	Clustering Error, Stream Failure	Save logs and continue running
RECORD	0x800198	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800199	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800200	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800201	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800202	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800203	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800204	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800205	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

RECORD	0x800206	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800207	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800208	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800209	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800210	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800211	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800212	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800213	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800214	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800215	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800216	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800217	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800218	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800219	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800220	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800221	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

RECORD	0x800222	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800223	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800224	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800225	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800226	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800227	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800228	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800229	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800230	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800231	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800232	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800233	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800234	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800235	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800236	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800237	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

RECORD	0x800238	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800239	Unexpected Pointer or Variable Value		Redownload the board and restart the application
RECORD	0x800240	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800241	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800242	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800243	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800244	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800245	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800246	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800247	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800248	Internal MMDL Macro Error		Redownload the board and restart the application
RECORD	0x800249	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800250	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800251	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800252	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800253	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

RECORD	0x800254	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800255	Internal MMDL Macro Error		Save logs and continue running
RECORD	0x800256	Runtime kernel Failure while sending a Message		Save logs and continue running
RECORD	0x800257	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800258	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800259	Unexpected Message or State Machine Error		Save logs and continue running
RECORD	0x800260	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
RECORD	0x800261	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
RECORD	0x800262	Unused		Save logs and continue running
RECORD		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
Resource	Loc Hex	Error class	Error subclass	Redownload the board and restart the application
SIGDET	0x800000	Unused		Redownload the board and restart the application
SIGDET	0x800001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800003	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
SIGDET	0x800004	Runtime kernel system call failure		Redownload the board and restart the application

SIGDET	0x800005	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800006	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800007	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800008	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800009	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800010	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800011	Memory Error		Redownload the board and restart the application
SIGDET	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800013	Memory Error		Redownload the board and restart the application
SIGDET	0x800014	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800015	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800016	Memory Error		Redownload the board and restart the application
SIGDET	0x800017	Memory Error		Redownload the board and restart the application
SIGDET	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800019	Memory Error		Redownload the board and restart the application
SIGDET	0x800020	Unexpected Message or State Machine Error		Redownload the board and restart the application

SIGDET	0x800021	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800022	Memory Error		Redownload the board and restart the application
SIGDET	0x800023	Memory Error		Redownload the board and restart the application
SIGDET	0x800024	Memory Error		Redownload the board and restart the application
SIGDET	0x800025	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800026	Memory Error		Redownload the board and restart the application
SIGDET	0x800027	Memory Error		Redownload the board and restart the application
SIGDET	0x800028	Memory Error		Redownload the board and restart the application
SIGDET	0x800029	Memory Error		Redownload the board and restart the application
SIGDET	0x800030	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800031	Memory Error		Redownload the board and restart the application
SIGDET	0x800032	Memory Error		Redownload the board and restart the application
SIGDET	0x800033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800034	Memory Error		Redownload the board and restart the application
SIGDET	0x800035	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800036	Runtime kernel system call failure		Redownload the board and restart the application

SIGDET	0x800037	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
SIGDET	0x800038	Memory Error		Redownload the board and restart the application
SIGDET	0x800039	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800040	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800041	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800042	Memory Error		Redownload the board and restart the application
SIGDET	0x800043	Memory Error		Redownload the board and restart the application
SIGDET	0x800044	Memory Error		Redownload the board and restart the application
SIGDET	0x800045	Unused		Redownload the board and restart the application
SIGDET	0x800046	Unused		Redownload the board and restart the application
SIGDET	0x800047	Memory Error		Redownload the board and restart the application
SIGDET	0x800048	Unused		Redownload the board and restart the application
SIGDET	0x800049	Memory Error		Redownload the board and restart the application
SIGDET	0x800050	Memory Error		Redownload the board and restart the application
SIGDET	0x800051	Memory Error		Redownload the board and restart the application
SIGDET	0x800052	Memory Error		Redownload the board and restart the application

SIGDET	0x800053	Unused		Redownload the board and restart the application
SIGDET	0x800054	Memory Error		Redownload the board and restart the application
SIGDET	0x800055	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800056	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800057	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800058	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800059	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800060	Memory Error		Redownload the board and restart the application
SIGDET	0x800061	Memory Error		Redownload the board and restart the application
SIGDET	0x800062	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800063	value out of bounds		Redownload the board and restart the application
SIGDET	0x800064	Memory Error		Redownload the board and restart the application
SIGDET	0x800065	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800066	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800067	value out of bounds		Redownload the board and restart the application
SIGDET	0x800068	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET	0x800069	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800070	value out of bounds		Redownload the board and restart the application
SIGDET	0x800071	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800072	value out of bounds		Redownload the board and restart the application
SIGDET	0x800073	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800074	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800075	Memory Error		Redownload the board and restart the application
SIGDET	0x800076	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800077	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800078	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800079	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800080	value out of bounds		Redownload the board and restart the application
SIGDET	0x800081	value out of bounds		Redownload the board and restart the application
SIGDET	0x800082	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800083	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800084	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET	0x800085	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800086	Memory Error		Redownload the board and restart the application
SIGDET	0x800087	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800088	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800089	Memory Error		Redownload the board and restart the application
SIGDET	0x800090	Memory Error		Redownload the board and restart the application
SIGDET	0x800091	Unexpected Message or State Machine Error		Save logs and continue running
SIGDET	0x800092	Memory Error		Redownload the board and restart the application
SIGDET	0x800093	Memory Error		Redownload the board and restart the application
SIGDET	0x800094	Memory Error		Redownload the board and restart the application
SIGDET	0x800095	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800096	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800097	value out of bounds		Redownload the board and restart the application
SIGDET	0x800098	value out of bounds		Redownload the board and restart the application
SIGDET	0x800099	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800100	value out of bounds		Redownload the board and restart the application

SIGDET	0x800101	value out of bounds		Redownload the board and restart the application
SIGDET	0x800102	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800103	Memory Error		Redownload the board and restart the application
SIGDET	0x800104	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800105	Memory Error		Redownload the board and restart the application
SIGDET	0x800106	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800107	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800108	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800109	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800110	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800111	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET	0x800112	Memory Error		Redownload the board and restart the application
SIGDET	0x800113	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800114	Memory Error		Redownload the board and restart the application
SIGDET	0x800115	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800116	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET	0x800117	Memory Error		Redownload the board and restart the application
SIGDET	0x800118	Unused		Redownload the board and restart the application
SIGDET	0x800119	Memory Error		Redownload the board and restart the application
SIGDET	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800121	Memory Error		Redownload the board and restart the application
SIGDET	0x800122	Unused		Redownload the board and restart the application
SIGDET	0x800123	Memory Error		Redownload the board and restart the application
SIGDET	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800125	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800126	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800127	Memory Error		Redownload the board and restart the application
SIGDET	0x800128	Memory Error		Redownload the board and restart the application
SIGDET	0x800129	Unused		Redownload the board and restart the application
SIGDET	0x800130	Memory Error		Redownload the board and restart the application
SIGDET	0x800131	Unused		Redownload the board and restart the application
SIGDET	0x800132	value out of bounds		Redownload the board and restart the application

SIGDET	0x800133	Memory Error		Redownload the board and restart the application
SIGDET	0x800134	Unused		Redownload the board and restart the application
SIGDET	0x800135	Memory Error		Redownload the board and restart the application
SIGDET	0x800136	Unused		Redownload the board and restart the application
SIGDET	0x800137	Memory Error		Redownload the board and restart the application
SIGDET	0x800138	Unused		Redownload the board and restart the application
SIGDET	0x800139	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800140	Unused		Redownload the board and restart the application
SIGDET	0x800141	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800142	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800143	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800144	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800145	Unused		Redownload the board and restart the application
SIGDET	0x800146	Memory Error		Redownload the board and restart the application
SIGDET	0x800147	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800148	Memory Error		Redownload the board and restart the application

SIGDET	0x800149	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800150	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800151	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800152	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800153	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800154	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800155	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800156	Memory Error		Redownload the board and restart the application
SIGDET	0x800157	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800158	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800159	Unused		Redownload the board and restart the application
SIGDET	0x800160	Unused		Redownload the board and restart the application
SIGDET	0x800161	Unused		Redownload the board and restart the application
SIGDET	0x800162	Unused		Redownload the board and restart the application
SIGDET	0x800163	Unused		Redownload the board and restart the application
SIGDET	0x800164	Unused		Redownload the board and restart the application

SIGDET	0x800165	Unused		Redownload the board and restart the application
SIGDET	0x800166	Unused		Redownload the board and restart the application
SIGDET	0x800167	Unused		Redownload the board and restart the application
SIGDET	0x800168	Unused		Redownload the board and restart the application
SIGDET	0x800169	Unused		Redownload the board and restart the application
SIGDET	0x800170	Unused		Redownload the board and restart the application
SIGDET	0x800171	Unused		Redownload the board and restart the application
SIGDET	0x800172	Unused		Redownload the board and restart the application
SIGDET	0x800173	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800174	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800175	Memory Error		Redownload the board and restart the application
SIGDET	0x800176	Memory Error		Redownload the board and restart the application
SIGDET	0x800177	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800178	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800179	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800180	Unused	Clustering Error	Redownload the board and restart the application

SIGDET	0x800181	Memory Error		Redownload the board and restart the application
SIGDET	0x800182	Unused		Redownload the board and restart the application
SIGDET	0x800183	Memory Error		Redownload the board and restart the application
SIGDET	0x800184	Unused		Redownload the board and restart the application
SIGDET	0x800185	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800186	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800187	Unused		Redownload the board and restart the application
SIGDET	0x800188	Unused		Redownload the board and restart the application
SIGDET	0x800189	Unused		Redownload the board and restart the application
SIGDET	0x800190	Unused		Redownload the board and restart the application
SIGDET	0x800191	Unused		Redownload the board and restart the application
SIGDET	0x800192	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800193	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800194	Memory Error		Redownload the board and restart the application
SIGDET	0x800195	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800196	Memory Error		Redownload the board and restart the application

SIGDET	0x800197	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800198	Unused		Redownload the board and restart the application
SIGDET	0x800199	Unused		Redownload the board and restart the application
SIGDET	0x800200	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800201	Memory Error		Redownload the board and restart the application
SIGDET	0x800202	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800203	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800204	Memory Error		Redownload the board and restart the application
SIGDET	0x800205	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800206	Memory Error		Redownload the board and restart the application
SIGDET	0x800207	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800208	Memory Error		Redownload the board and restart the application
SIGDET	0x800209	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800210	Memory Error		Redownload the board and restart the application
SIGDET	0x800211	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800212	Memory Error		Redownload the board and restart the application

SIGDET	0x800213	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800214	Memory Error		Redownload the board and restart the application
SIGDET	0x800215	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800216	Memory Error		Redownload the board and restart the application
SIGDET	0x800217	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800218	Memory Error		Redownload the board and restart the application
SIGDET	0x800219	Unused		Redownload the board and restart the application
SIGDET	0x800220	Memory Error		Redownload the board and restart the application
SIGDET	0x800221	Unused		Redownload the board and restart the application
SIGDET	0x800222	Memory Error		Redownload the board and restart the application
SIGDET	0x800223	Unused		Redownload the board and restart the application
SIGDET	0x800224	Unused		Redownload the board and restart the application
SIGDET	0x800225	Unused		Redownload the board and restart the application
SIGDET	0x800226	Unused		Redownload the board and restart the application
SIGDET	0x800227	Unused		Redownload the board and restart the application
SIGDET	0x800228	Unused		Redownload the board and restart the application

SIGDET	0x800229	Unused		Redownload the board and restart the application
SIGDET	0x800230	Unused		Redownload the board and restart the application
SIGDET	0x800231	Unused		Redownload the board and restart the application
SIGDET	0x800232	Memory Error		Redownload the board and restart the application
SIGDET	0x800233	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800234	Memory Error		Redownload the board and restart the application
SIGDET	0x800235	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800236	Memory Error		Redownload the board and restart the application
SIGDET	0x800237	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800238	Unused		Redownload the board and restart the application
SIGDET	0x800239	Memory Error		Redownload the board and restart the application
SIGDET	0x800240	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800241	Memory Error		Redownload the board and restart the application
SIGDET	0x800242	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800243	Memory Error		Redownload the board and restart the application
SIGDET	0x800244	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

SIGDET	0x800245	Memory Error		Redownload the board and restart the application
SIGDET	0x800246	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800247	Unused		Redownload the board and restart the application
SIGDET	0x800248	Memory Error		Redownload the board and restart the application
SIGDET	0x800249	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800250	Unused		Redownload the board and restart the application
SIGDET	0x800251	Unused		Redownload the board and restart the application
SIGDET	0x800252	Unused		Redownload the board and restart the application
SIGDET	0x800253	Unused		Redownload the board and restart the application
SIGDET	0x800254	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800255	Memory Error		Redownload the board and restart the application
SIGDET	0x800256	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800257	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800258	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800259	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800260	value out of bounds		Redownload the board and restart the application

SIGDET	0x800261	value out of bounds		Redownload the board and restart the application
SIGDET	0x800262	Memory Error		Redownload the board and restart the application
SIGDET	0x800263	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800264	value out of bounds		Redownload the board and restart the application
SIGDET	0x800265	Memory Error		Redownload the board and restart the application
SIGDET	0x800266	Memory Error		Redownload the board and restart the application
SIGDET	0x800267	Memory Error		Redownload the board and restart the application
SIGDET	0x800268	Memory Error		Redownload the board and restart the application
SIGDET	0x800269	Memory Error		Redownload the board and restart the application
SIGDET	0x800270	Memory Error		Redownload the board and restart the application
SIGDET	0x800271	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800272	Memory Error		Redownload the board and restart the application
SIGDET	0x800273	Memory Error		Redownload the board and restart the application
SIGDET	0x800274	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800275	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800276	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET	0x800277	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800278	Memory Error		Redownload the board and restart the application
SIGDET	0x800279	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800280	Memory Error		Redownload the board and restart the application
SIGDET	0x800281	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800282	Memory Error		Redownload the board and restart the application
SIGDET	0x800283	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800284	Memory Error		Redownload the board and restart the application
SIGDET	0x800285	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800286	Memory Error		Redownload the board and restart the application
SIGDET	0x800287	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800288	Memory Error		Redownload the board and restart the application
SIGDET	0x800289	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800290	Memory Error		Redownload the board and restart the application
SIGDET	0x800291	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800292	Memory Error		Redownload the board and restart the application

SIGDET	0x800293	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800294	Memory Error		Redownload the board and restart the application
SIGDET	0x800295	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800296	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800297	Unused		Redownload the board and restart the application
SIGDET	0x800298	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800299	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800300	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
SIGDET	0x800301	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800302	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800303	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800304	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET	0x800305	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
SIGDET	0x800306	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
SIGDET	0x800307	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET	0x800308	Unused	Clustering Error	Redownload the board and restart the application

SIGDET	0x800309	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800310	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800311	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET	0x800312	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800313	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800314	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800315	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800316	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800317	Memory Error		Redownload the board and restart the application
SIGDET	0x800318	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800319	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800320	Unused		Redownload the board and restart the application
SIGDET	0x800321	Unused	Clustering Error	Redownload the board and restart the application
SIGDET	0x800322	Unused		Redownload the board and restart the application
SIGDET	0x800323	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800324	Internal MMDL Macro Error		Redownload the board and restart the application

SIGDET	0x800325	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800326	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800327	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800328	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800329	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800330	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800331	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800331	Memory Error		Redownload the board and restart the application
SIGDET	0x800332	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800332	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800333	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800334	Memory Error		Redownload the board and restart the application
SIGDET	0x800335	Memory Error		Redownload the board and restart the application
SIGDET	0x800338	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800339	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800340	Memory Error		Redownload the board and restart the application

SIGDET	0x800341	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800342	Memory Error		Redownload the board and restart the application
SIGDET	0x800343	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800344	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800345	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800346	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800347	Memory Error		Redownload the board and restart the application
SIGDET	0x800348	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET	0x800349	Memory Error		Redownload the board and restart the application
SIGDET	0x800350	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800351	Memory Error		Redownload the board and restart the application
SIGDET	0x800352	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800353	Memory Error		Redownload the board and restart the application
SIGDET	0x800354	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800355	Memory Error		Redownload the board and restart the application
SIGDET	0x800356	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

SIGDET	0x800357	Memory Error		Redownload the board and restart the application
SIGDET	0x800358	Memory Error		Redownload the board and restart the application
SIGDET	0x800359	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800360	value out of bounds		Redownload the board and restart the application
SIGDET	0x800361	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET	0x800362	value out of bounds		Redownload the board and restart the application
SIGDET	0x800363	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
SIGDET	0x800364	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
SIGDET	0x800365	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
SIGDET	0x800366	Memory Error		Redownload the board and restart the application
SIGDET	0x800367	Memory Error		Redownload the board and restart the application
SIGDET	0x800368	Memory Error		Redownload the board and restart the application
SIGDET	0x800369	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET	0x800502	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800503	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET	0x800504	Runtime kernel system call failure		Redownload the board and restart the application

SIGDET	0x800505	Memory Error		Redownload the board and restart the application
SIGDET	0x800506	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800507	Memory Error		Redownload the board and restart the application
SIGDET	0x800508	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET	0x800509	Memory Error		Redownload the board and restart the application
SIGDET	0x800510	Memory Error		Redownload the board and restart the application
SIGDET	0x800511	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET		Memory Error		Redownload the board and restart the application
SIGDET		Memory Error		Redownload the board and restart the application
SIGDET		Memory Error		Redownload the board and restart the application
SIGDET		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET		Runtime kernel system call failure		Redownload the board and restart the application
SIGDET		Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET		Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET		Unused		Redownload the board and restart the application
SIGDET	SIGDET480	Unused		Redownload the board and restart the application
		Unused		Redownload the board and restart the application
		Unused		Redownload the board and restart the application
		Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800004	Unused		Redownload the board and restart the application

SIGDET480	0x800005	Unused		Redownload the board and restart the application
SIGDET480	0x800006	Unused		Redownload the board and restart the application
SIGDET480	0x800007	Unused		Redownload the board and restart the application
SIGDET480	0x800008	Unused		Redownload the board and restart the application
SIGDET480	0x800009	Unused		Redownload the board and restart the application
SIGDET480	0x800010	Unused		Redownload the board and restart the application
SIGDET480	0x800011	Memory Error		Redownload the board and restart the application
SIGDET480	0x800012	Unused		Redownload the board and restart the application
SIGDET480	0x800013	Memory Error		Redownload the board and restart the application
SIGDET480	0x800014	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800015	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800016	Memory Error		Redownload the board and restart the application
SIGDET480	0x800017	Memory Error		Redownload the board and restart the application
SIGDET480	0x800018	Unused		Redownload the board and restart the application
SIGDET480	0x800019	Memory Error		Redownload the board and restart the application
SIGDET480	0x800020	Unused		Redownload the board and restart the application

SIGDET480	0x800021	Unused		Redownload the board and restart the application
SIGDET480	0x800022	Memory Error		Redownload the board and restart the application
SIGDET480	0x800023	Memory Error		Redownload the board and restart the application
SIGDET480	0x800024	Memory Error		Redownload the board and restart the application
SIGDET480	0x800025	Unused		Redownload the board and restart the application
SIGDET480	0x800026	Memory Error		Redownload the board and restart the application
SIGDET480	0x800027	Memory Error		Redownload the board and restart the application
SIGDET480	0x800028	Memory Error		Redownload the board and restart the application
SIGDET480	0x800029	Memory Error		Redownload the board and restart the application
SIGDET480	0x800030	Unused		Redownload the board and restart the application
SIGDET480	0x800031	Memory Error		Redownload the board and restart the application
SIGDET480	0x800032	Memory Error		Redownload the board and restart the application
SIGDET480	0x800033	Unused		Redownload the board and restart the application
SIGDET480	0x800034	Memory Error		Redownload the board and restart the application
SIGDET480	0x800035	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800036	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET480	0x800037	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800038	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800039	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800040	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800041	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800042	Memory Error		Redownload the board and restart the application
SIGDET480	0x800043	Memory Error		Redownload the board and restart the application
SIGDET480	0x800044	Memory Error		Redownload the board and restart the application
SIGDET480	0x800045	Unused		Redownload the board and restart the application
SIGDET480	0x800046	Unused		Redownload the board and restart the application
SIGDET480	0x800047	Memory Error		Redownload the board and restart the application
SIGDET480	0x800048	Unused		Redownload the board and restart the application
SIGDET480	0x800049	Memory Error		Redownload the board and restart the application
SIGDET480	0x800050	Memory Error		Redownload the board and restart the application
SIGDET480	0x800051	Memory Error		Redownload the board and restart the application
SIGDET480	0x800052	Memory Error		Redownload the board and restart the application

SIGDET480	0x800053	Unused		Redownload the board and restart the application
SIGDET480	0x800054	Memory Error		Redownload the board and restart the application
SIGDET480	0x800055	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800056	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800057	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800058	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800059	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800060	Memory Error		Redownload the board and restart the application
SIGDET480	0x800061	Memory Error		Redownload the board and restart the application
SIGDET480	0x800062	Unused		Redownload the board and restart the application
SIGDET480	0x800063	Unused		Redownload the board and restart the application
SIGDET480	0x800064	Memory Error		Redownload the board and restart the application
SIGDET480	0x800065	Unused		Redownload the board and restart the application
SIGDET480	0x800066	Unused		Redownload the board and restart the application
SIGDET480	0x800067	Unused		Redownload the board and restart the application
SIGDET480	0x800068	Unused		Redownload the board and restart the application

SIGDET480	0x800069	Unused		Redownload the board and restart the application
SIGDET480	0x800070	Unused		Redownload the board and restart the application
SIGDET480	0x800071	Unused		Redownload the board and restart the application
SIGDET480	0x800072	Unused		Redownload the board and restart the application
SIGDET480	0x800073	Unused		Redownload the board and restart the application
SIGDET480	0x800074	Unused		Redownload the board and restart the application
SIGDET480	0x800075	Memory Error		Redownload the board and restart the application
SIGDET480	0x800076	Unused		Redownload the board and restart the application
SIGDET480	0x800077	Unused		Redownload the board and restart the application
SIGDET480	0x800078	Unused		Redownload the board and restart the application
SIGDET480	0x800079	Unused		Redownload the board and restart the application
SIGDET480	0x800080	Unused		Redownload the board and restart the application
SIGDET480	0x800081	Unused		Redownload the board and restart the application
SIGDET480	0x800082	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800083	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800084	Unused		Redownload the board and restart the application

SIGDET480	0x800085	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800086	Memory Error		Redownload the board and restart the application
SIGDET480	0x800087	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800088	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800089	Memory Error		Redownload the board and restart the application
SIGDET480	0x800090	Memory Error		Redownload the board and restart the application
SIGDET480	0x800091	Unexpected Message or State Machine Error		Save logs and continue running
SIGDET480	0x800092	Memory Error		Redownload the board and restart the application
SIGDET480	0x800093	Memory Error		Redownload the board and restart the application
SIGDET480	0x800094	Memory Error		Redownload the board and restart the application
SIGDET480	0x800095	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800096	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800097	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800098	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800099	Unused		Redownload the board and restart the application
SIGDET480	0x800100	value out of bounds		Redownload the board and restart the application

SIGDET480	0x800101	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800102	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800103	Memory Error		Redownload the board and restart the application
SIGDET480	0x800104	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800105	Memory Error		Redownload the board and restart the application
SIGDET480	0x800106	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800107	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800108	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800109	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800110	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800111	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
SIGDET480	0x800112	Memory Error		Redownload the board and restart the application
SIGDET480	0x800113	Unused		Redownload the board and restart the application
SIGDET480	0x800114	Memory Error		Redownload the board and restart the application
SIGDET480	0x800115	Unused		Redownload the board and restart the application
SIGDET480	0x800116	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET480	0x800117	Memory Error		Redownload the board and restart the application
SIGDET480	0x800118	Unused		Redownload the board and restart the application
SIGDET480	0x800119	Memory Error		Redownload the board and restart the application
SIGDET480	0x800120	Unused		Redownload the board and restart the application
SIGDET480	0x800121	Memory Error		Redownload the board and restart the application
SIGDET480	0x800122	Unused		Redownload the board and restart the application
SIGDET480	0x800123	Memory Error		Redownload the board and restart the application
SIGDET480	0x800124	Unused		Redownload the board and restart the application
SIGDET480	0x800125	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800126	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800127	Memory Error		Redownload the board and restart the application
SIGDET480	0x800128	Memory Error		Redownload the board and restart the application
SIGDET480	0x800129	Unused		Redownload the board and restart the application
SIGDET480	0x800130	Memory Error		Redownload the board and restart the application
SIGDET480	0x800131	Unused		Redownload the board and restart the application
SIGDET480	0x800132	value out of bounds		Redownload the board and restart the application

SIGDET480	0x800133	Memory Error		Redownload the board and restart the application
SIGDET480	0x800134	Unused		Redownload the board and restart the application
SIGDET480	0x800135	Memory Error		Redownload the board and restart the application
SIGDET480	0x800136	Unused		Redownload the board and restart the application
SIGDET480	0x800137	Memory Error		Redownload the board and restart the application
SIGDET480	0x800138	Unused		Redownload the board and restart the application
SIGDET480	0x800139	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800140	Unused		Redownload the board and restart the application
SIGDET480	0x800141	Unused		Redownload the board and restart the application
SIGDET480	0x800142	Unused		Redownload the board and restart the application
SIGDET480	0x800143	Unused		Redownload the board and restart the application
SIGDET480	0x800144	Unused		Redownload the board and restart the application
SIGDET480	0x800145	Unused		Redownload the board and restart the application
SIGDET480	0x800146	Memory Error		Redownload the board and restart the application
SIGDET480	0x800147	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800148	Memory Error		Redownload the board and restart the application

SIGDET480	0x800149	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800150	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800151	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800152	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800153	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800154	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800155	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800156	Memory Error		Redownload the board and restart the application
SIGDET480	0x800157	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800158	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800159	Unused		Redownload the board and restart the application
SIGDET480	0x800160	Unused		Redownload the board and restart the application
SIGDET480	0x800161	Unused		Redownload the board and restart the application
SIGDET480	0x800162	Unused		Redownload the board and restart the application
SIGDET480	0x800163	Unused		Redownload the board and restart the application
SIGDET480	0x800164	Unused		Redownload the board and restart the application

SIGDET480	0x800165	Unused		Redownload the board and restart the application
SIGDET480	0x800166	Unused		Redownload the board and restart the application
SIGDET480	0x800167	Unused		Redownload the board and restart the application
SIGDET480	0x800168	Unused		Redownload the board and restart the application
SIGDET480	0x800169	Unused		Redownload the board and restart the application
SIGDET480	0x800170	Unused		Redownload the board and restart the application
SIGDET480	0x800171	Unused		Redownload the board and restart the application
SIGDET480	0x800172	Unused		Redownload the board and restart the application
SIGDET480	0x800173	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800174	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800175	Memory Error		Redownload the board and restart the application
SIGDET480	0x800176	Memory Error		Redownload the board and restart the application
SIGDET480	0x800177	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800178	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800179	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800180	Unused	Clustering Error	Redownload the board and restart the application

SIGDET480	0x800181	Memory Error		Redownload the board and restart the application
SIGDET480	0x800182	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800183	Memory Error		Redownload the board and restart the application
SIGDET480	0x800184	Unused		Redownload the board and restart the application
SIGDET480	0x800185	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800186	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800187	Unused		Redownload the board and restart the application
SIGDET480	0x800188	Unused		Redownload the board and restart the application
SIGDET480	0x800189	Unused		Redownload the board and restart the application
SIGDET480	0x800190	Unused		Redownload the board and restart the application
SIGDET480	0x800191	Unused		Redownload the board and restart the application
SIGDET480	0x800192	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800193	Unused		Redownload the board and restart the application
SIGDET480	0x800194	Memory Error		Redownload the board and restart the application
SIGDET480	0x800195	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800196	Memory Error		Redownload the board and restart the application

SIGDET480	0x800197	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800198	Unused		Redownload the board and restart the application
SIGDET480	0x800199	Unused		Redownload the board and restart the application
SIGDET480	0x800200	Unused		Redownload the board and restart the application
SIGDET480	0x800201	Memory Error		Redownload the board and restart the application
SIGDET480	0x800202	Unused		Redownload the board and restart the application
SIGDET480	0x800203	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800204	Memory Error		Redownload the board and restart the application
SIGDET480	0x800205	Unused		Redownload the board and restart the application
SIGDET480	0x800206	Memory Error		Redownload the board and restart the application
SIGDET480	0x800207	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800208	Memory Error		Redownload the board and restart the application
SIGDET480	0x800209	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800210	Memory Error		Redownload the board and restart the application
SIGDET480	0x800211	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800212	Memory Error		Redownload the board and restart the application

SIGDET480	0x800213	Unused		Redownload the board and restart the application
SIGDET480	0x800214	Memory Error		Redownload the board and restart the application
SIGDET480	0x800215	Unused		Redownload the board and restart the application
SIGDET480	0x800216	Memory Error		Redownload the board and restart the application
SIGDET480	0x800217	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800218	Memory Error		Redownload the board and restart the application
SIGDET480	0x800219	Unused		Redownload the board and restart the application
SIGDET480	0x800220	Memory Error		Redownload the board and restart the application
SIGDET480	0x800221	Unused		Redownload the board and restart the application
SIGDET480	0x800222	Memory Error		Redownload the board and restart the application
SIGDET480	0x800223	Unused		Redownload the board and restart the application
SIGDET480	0x800224	Memory Error		Redownload the board and restart the application
SIGDET480	0x800225	Unused		Redownload the board and restart the application
SIGDET480	0x800226	Unused		Redownload the board and restart the application
SIGDET480	0x800227	Unused		Redownload the board and restart the application
SIGDET480	0x800228	Unused		Redownload the board and restart the application

SIGDET480	0x800229	Unused		Redownload the board and restart the application
SIGDET480	0x800230	Unused		Redownload the board and restart the application
SIGDET480	0x800231	Unused		Redownload the board and restart the application
SIGDET480	0x800232	Memory Error		Redownload the board and restart the application
SIGDET480	0x800233	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800234	Memory Error		Redownload the board and restart the application
SIGDET480	0x800235	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800236	Memory Error		Redownload the board and restart the application
SIGDET480	0x800237	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800238	Unused		Redownload the board and restart the application
SIGDET480	0x800239	Memory Error		Redownload the board and restart the application
SIGDET480	0x800240	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800241	Memory Error		Redownload the board and restart the application
SIGDET480	0x800242	Unused		Redownload the board and restart the application
SIGDET480	0x800243	Memory Error		Redownload the board and restart the application
SIGDET480	0x800244	Unused		Redownload the board and restart the application

SIGDET480	0x800245	Memory Error		Redownload the board and restart the application
SIGDET480	0x800246	Unused		Redownload the board and restart the application
SIGDET480	0x800247	Unused		Redownload the board and restart the application
SIGDET480	0x800248	Memory Error		Redownload the board and restart the application
SIGDET480	0x800249	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800250	Unused		Redownload the board and restart the application
SIGDET480	0x800251	Unused		Redownload the board and restart the application
SIGDET480	0x800252	Unused		Redownload the board and restart the application
SIGDET480	0x800253	Unused		Redownload the board and restart the application
SIGDET480	0x800254	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800255	Memory Error		Redownload the board and restart the application
SIGDET480	0x800256	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800257	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800258	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800259	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800260	value out of bounds		Redownload the board and restart the application

SIGDET480	0x800261	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800262	Memory Error		Redownload the board and restart the application
SIGDET480	0x800263	Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480	0x800264	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800265	Memory Error		Redownload the board and restart the application
SIGDET480	0x800266	Memory Error		Redownload the board and restart the application
SIGDET480	0x800267	Memory Error		Redownload the board and restart the application
SIGDET480	0x800268	Memory Error		Redownload the board and restart the application
SIGDET480	0x800269	Memory Error		Redownload the board and restart the application
SIGDET480	0x800270	Memory Error		Redownload the board and restart the application
SIGDET480	0x800271	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800272	Memory Error		Redownload the board and restart the application
SIGDET480	0x800273	Memory Error		Redownload the board and restart the application
SIGDET480	0x800274	Unused		Redownload the board and restart the application
SIGDET480	0x800275	Unused		Redownload the board and restart the application
SIGDET480	0x800276	Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET480	0x800277	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800278	Memory Error		Redownload the board and restart the application
SIGDET480	0x800279	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800280	Memory Error		Redownload the board and restart the application
SIGDET480	0x800281	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800282	Memory Error		Redownload the board and restart the application
SIGDET480	0x800283	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800284	Memory Error		Redownload the board and restart the application
SIGDET480	0x800285	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800286	Memory Error		Redownload the board and restart the application
SIGDET480	0x800287	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800288	Memory Error		Redownload the board and restart the application
SIGDET480	0x800289	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800290	Memory Error		Redownload the board and restart the application
SIGDET480	0x800291	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800292	Memory Error		Redownload the board and restart the application

SIGDET480	0x800293	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800294	Memory Error		Redownload the board and restart the application
SIGDET480	0x800295	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800296	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800297	Unused		Redownload the board and restart the application
SIGDET480	0x800298	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800299	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800300	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800301	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800302	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800303	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800304	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800305	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800306	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
SIGDET480	0x800307	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800308	Unused	Clustering Error	Redownload the board and restart the application

SIGDET480	0x800309	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800310	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800311	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800312	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800313	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800314	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800315	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800316	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800317	Memory Error		Redownload the board and restart the application
SIGDET480	0x800318	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800319	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800320	Unused		Redownload the board and restart the application
SIGDET480	0x800321	Unused		Redownload the board and restart the application
SIGDET480	0x800322	Unused	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800323	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800324	Internal MMDL Macro Error		Redownload the board and restart the application

SIGDET480	0x800325	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800326	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800327	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800328	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800329	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800330	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800331	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800331	Memory Error		Redownload the board and restart the application
SIGDET480	0x800332	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800332	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800333	Unused		Redownload the board and restart the application
SIGDET480	0x800334	Unused		Redownload the board and restart the application
SIGDET480	0x800335	Memory Error		Redownload the board and restart the application
SIGDET480	0x800338	Memory Error		Redownload the board and restart the application
SIGDET480	0x800339	Memory Error		Redownload the board and restart the application
SIGDET480	0x800340	Memory Error		Redownload the board and restart the application

SIGDET480	0x800341	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800342	Memory Error		Redownload the board and restart the application
SIGDET480	0x800343	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800344	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800345	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800346	Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480	0x800347	Memory Error		Redownload the board and restart the application
SIGDET480	0x800348	Internal MMDL Macro Error		Redownload the board and restart the application
SIGDET480	0x800349	Memory Error		Redownload the board and restart the application
SIGDET480	0x800350	Unused		Redownload the board and restart the application
SIGDET480	0x800351	Memory Error		Redownload the board and restart the application
SIGDET480	0x800352	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800353	Memory Error		Redownload the board and restart the application
SIGDET480	0x800354	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800355	Memory Error		Redownload the board and restart the application
SIGDET480	0x800356	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

SIGDET480	0x800357	Memory Error		Redownload the board and restart the application
SIGDET480	0x800358	Memory Error		Redownload the board and restart the application
SIGDET480	0x800359	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800360	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800361	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800362	value out of bounds		Redownload the board and restart the application
SIGDET480	0x800363	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800364	Unexpected Pointer or Variable Value	Clustering Error	Redownload the board and restart the application
SIGDET480	0x800365	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
SIGDET480	0x800366	Memory Error		Redownload the board and restart the application
SIGDET480	0x800367	Memory Error		Redownload the board and restart the application
SIGDET480	0x800368	Memory Error		Redownload the board and restart the application
SIGDET480	0x800502	Unused		Redownload the board and restart the application
SIGDET480	0x800503	Unused		Redownload the board and restart the application
SIGDET480	0x800504	Unused		Redownload the board and restart the application
SIGDET480	0x800505	Memory Error		Redownload the board and restart the application

SIGDET480	0x800506	Unused		Redownload the board and restart the application
SIGDET480	0x800507	Memory Error		Redownload the board and restart the application
SIGDET480	0x800508	Unused		Redownload the board and restart the application
SIGDET480	0x800509	Memory Error		Redownload the board and restart the application
SIGDET480	0x800510	Memory Error		Redownload the board and restart the application
SIGDET480	0x800511	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800512	Memory Error		Redownload the board and restart the application
SIGDET480	0x800513	Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480	0x800514	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800515	Unused		Redownload the board and restart the application
SIGDET480	0x800516	Memory Error		Redownload the board and restart the application
SIGDET480	0x800517	Unused		Redownload the board and restart the application
SIGDET480	0x800518	Memory Error		Redownload the board and restart the application
SIGDET480	0x800519	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480	0x800520	Memory Error		Redownload the board and restart the application
SIGDET480	0x800521	Unused		Redownload the board and restart the application

SIGDET480	0x800522	Memory Error		Redownload the board and restart the application
SIGDET480	0x800523	Unused		Redownload the board and restart the application
SIGDET480	0x800524	Memory Error		Redownload the board and restart the application
SIGDET480	0x800525	Unused		Redownload the board and restart the application
SIGDET480	0x800526	Memory Error		Redownload the board and restart the application
SIGDET480	0x800527	Unused		Redownload the board and restart the application
SIGDET480	0x800528	Memory Error		Redownload the board and restart the application
SIGDET480	0x800529	Unused		Redownload the board and restart the application
SIGDET480	0x800530	Memory Error		Redownload the board and restart the application
SIGDET480	0x800531	Unused		Redownload the board and restart the application
SIGDET480	0x800532	Memory Error		Redownload the board and restart the application
SIGDET480	0x800533	Unused		Redownload the board and restart the application
SIGDET480	0x800534	Memory Error		Redownload the board and restart the application
SIGDET480	0x800535	Unused		Redownload the board and restart the application
SIGDET480	0x800536	Memory Error		Redownload the board and restart the application
SIGDET480	0x800537	Unused		Redownload the board and restart the application

SIGDET480	0x800538	Memory Error		Redownload the board and restart the application
SIGDET480	0x800539	Unused		Redownload the board and restart the application
SIGDET480		Memory Error		Redownload the board and restart the application
SIGDET480		Memory Error		Redownload the board and restart the application
SIGDET480		Memory Error		Redownload the board and restart the application
SIGDET480		Memory Error		Redownload the board and restart the application
SIGDET480		Memory Error		Redownload the board and restart the application
SIGDET480		Memory Error		Redownload the board and restart the application
SIGDET480		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SIGDET480		Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480		Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480		Runtime kernel system call failure		Redownload the board and restart the application
SIGDET480		Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480		Unexpected Message or State Machine Error		Redownload the board and restart the application
SIGDET480		Unexpected Pointer or Variable Value		Redownload the board and restart the application

SIGDET480		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480		Unexpected Pointer or Variable Value		Redownload the board and restart the application
SIGDET480		Unused		Redownload the board and restart the application
TONEGEN	0x800000	Unused		Redownload the board and restart the application
TONEGEN	0x800001	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800003	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800004	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800006	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800007	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800008	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800009	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800010	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800015	Memory Error		Redownload the board and restart the application
TONEGEN	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800017	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800020	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800022	Memory Error		Redownload the board and restart the application
TONEGEN	0x800023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800024	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800025	Memory Error		Redownload the board and restart the application
TONEGEN	0x800026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800027	Memory Error		Redownload the board and restart the application

TONEGEN	0x800028	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800029	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800031	Memory Error		Redownload the board and restart the application
TONEGEN	0x800032	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800034	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800035	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800036	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800037	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800038	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800039	Memory Error		Redownload the board and restart the application
TONEGEN	0x800040	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800041	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800042	Memory Error		Redownload the board and restart the application
TONEGEN	0x800043	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

TONEGEN	0x800044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800045	Memory Error		Redownload the board and restart the application
TONEGEN	0x800046	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800048	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800049	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800050	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800051	Memory Error		Redownload the board and restart the application
TONEGEN	0x800052	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800053	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800054	Memory Error		Redownload the board and restart the application
TONEGEN	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800056	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800057	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800058	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800059	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800060	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800061	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800062	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800063	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800064	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800065	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800066	Memory Error		Redownload the board and restart the application
TONEGEN	0x800067	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800068	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800069	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800070	Memory Error		Redownload the board and restart the application
TONEGEN	0x800071	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800072	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800073	Memory Error		Redownload the board and restart the application
TONEGEN	0x800074	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800075	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800076	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800077	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800078	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800079	Memory Error		Redownload the board and restart the application
TONEGEN	0x800080	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800081	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800082	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800083	Memory Error		Redownload the board and restart the application
TONEGEN	0x800084	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800085	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800086	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800087	Memory Error		Redownload the board and restart the application
TONEGEN	0x800088	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800089	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800090	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800091	Memory Error		Redownload the board and restart the application

TONEGEN	0x800092	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800093	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800094	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800095	value out of bounds		Redownload the board and restart the application
TONEGEN	0x800096	value out of bounds		Redownload the board and restart the application
TONEGEN	0x800097	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800098	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800099	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800100	Memory Error		Redownload the board and restart the application
TONEGEN	0x800101	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800102	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TONEGEN	0x800103	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800104	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800105	Memory Error		Redownload the board and restart the application
TONEGEN	0x800106	Memory Error		Redownload the board and restart the application
TONEGEN	0x800107	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800108	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800109	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TONEGEN	0x800110	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800111	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800112	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800113	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TONEGEN	0x800114	Memory Error		Redownload the board and restart the application
TONEGEN	0x800115	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800116	Memory Error		Redownload the board and restart the application
TONEGEN	0x800117	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800118	Memory Error		Redownload the board and restart the application
TONEGEN	0x800119	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800120	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800121	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TONEGEN	0x800122	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800123	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800124	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800125	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800126	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800127	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800128	Memory Error		Redownload the board and restart the application
TONEGEN	0x800129	Memory Error		Redownload the board and restart the application
TONEGEN	0x800130	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800131	Memory Error		Redownload the board and restart the application
TONEGEN	0x800132	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800133	Memory Error		Redownload the board and restart the application
TONEGEN	0x800134	Memory Error		Redownload the board and restart the application
TONEGEN	0x800135	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800136	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800137	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800138	Memory Error		Redownload the board and restart the application
TONEGEN	0x800139	Memory Error		Redownload the board and restart the application

TONEGEN	0x800140	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800141	Memory Error		Redownload the board and restart the application
TONEGEN	0x800142	Memory Error		Redownload the board and restart the application
TONEGEN	0x800143	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800144	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800145	Memory Error		Redownload the board and restart the application
TONEGEN	0x800146	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800147	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800148	Memory Error		Redownload the board and restart the application
TONEGEN	0x800149	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800150	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800151	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800152	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800153	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800154	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800155	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800156	Memory Error		Redownload the board and restart the application
TONEGEN	0x800157	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800158	Memory Error		Redownload the board and restart the application
TONEGEN	0x800159	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800160	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800161	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800162	Memory Error		Redownload the board and restart the application
TONEGEN	0x800163	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800164	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800165	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800166	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800167	Memory Error		Redownload the board and restart the application
TONEGEN	0x800168	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800169	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800170	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800171	Internal MMDL Macro Error		Redownload the board and restart the application

TONEGEN	0x800172	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800173	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800174	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800175	Memory Error		Redownload the board and restart the application
TONEGEN	0x800176	Memory Error		Redownload the board and restart the application
TONEGEN	0x800177	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800178	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800179	Memory Error		Redownload the board and restart the application
TONEGEN	0x800180	Memory Error		Redownload the board and restart the application
TONEGEN	0x800181	Memory Error		Redownload the board and restart the application
TONEGEN	0x800182	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800183	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800184	Memory Error		Redownload the board and restart the application
TONEGEN	0x800185	Memory Error		Redownload the board and restart the application
TONEGEN	0x800186	Runtime kernel system call failure	Clustering Error, Stream failure	Redownload the board and restart the application
TONEGEN	0x800187	Memory Error		Redownload the board and restart the application

TONEGEN	0x800188	Memory Error		Redownload the board and restart the application
TONEGEN	0x800189	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800190	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800191	Memory Error		Redownload the board and restart the application
TONEGEN	0x800192	Memory Error		Redownload the board and restart the application
TONEGEN	0x800193	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800194	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800195	Memory Error		Redownload the board and restart the application
TONEGEN	0x800196	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800197	Memory Error		Redownload the board and restart the application
TONEGEN	0x800198	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800199	Memory Error		Redownload the board and restart the application
TONEGEN	0x800200	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800201	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800202	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800203	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application

TONEGEN	0x800204	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800205	Memory Error		Redownload the board and restart the application
TONEGEN	0x800206	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800207	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800208	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800209	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TONEGEN	0x800210	Memory Error		Redownload the board and restart the application
TONEGEN	0x800211	Memory Error		Redownload the board and restart the application
TONEGEN	0x800212	Memory Error		Redownload the board and restart the application
TONEGEN	0x800213	Memory Error		Redownload the board and restart the application
TONEGEN	0x800214	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800215	Memory Error		Redownload the board and restart the application
TONEGEN	0x800216	Memory Error		Redownload the board and restart the application
TONEGEN	0x800217	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800218	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN	0x800219	Unexpected Message or State Machine Error		Redownload the board and restart the application

TONEGEN	0x800220	Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN	0x800221	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800222	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800223	Memory Error		Redownload the board and restart the application
TONEGEN	0x800224	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800225	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800226	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800227	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800228	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800229	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800230	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800231	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800232	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800233	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800234	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800235	Internal MMDL Macro Error		Redownload the board and restart the application

TONEGEN	0x800236	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800237	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800238	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800239	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800240	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800241	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800242	Memory Error		Redownload the board and restart the application
TONEGEN	0x800243	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800244	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800245	Memory Error		Redownload the board and restart the application
TONEGEN	0x800246	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800247	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800248	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800249	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800250	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800251	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TONEGEN	0x800252	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800253	Memory Error		Redownload the board and restart the application
TONEGEN	0x800254	Memory Error		Redownload the board and restart the application
TONEGEN	0x800255	Unused		Redownload the board and restart the application
TONEGEN	0x800256	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800257	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800258	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800259	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TONEGEN	0x800260	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800261	Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN	0x800262	Memory Error		Redownload the board and restart the application
TONEGEN	0x800263	Memory Error		Redownload the board and restart the application
TONEGEN	0x800264	Memory Error		Redownload the board and restart the application
TONEGEN	0x800265	Memory Error		Redownload the board and restart the application
TONEGEN	0x800266	Memory Error		Redownload the board and restart the application
TONEGEN	0x800267	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application

TONEGEN	0x800268	value out of bounds		Redownload the board and restart the application
TONEGEN	0x800269	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800270	Memory Error		Redownload the board and restart the application
TONEGEN	0x800271	Memory Error		Redownload the board and restart the application
TONEGEN	0x800272	Internal MMDL Macro Error		Redownload the board and restart the application
TONEGEN	0x800273	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800274	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN	0x800275	Memory Error		Redownload the board and restart the application
TONEGEN	0x800276	Memory Error		Save logs and continue running
TONEGEN	0x800277	Memory Error		Redownload the board and restart the application
TONEGEN		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TONEGEN		Runtime kernel system call failure		Redownload the board and restart the application
TONEGEN		Unexpected Message or State Machine Error		Redownload the board and restart the application
TONEGEN		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TONEGEN		Unexpected Pointer or Variable Value		Redownload the board and restart the application

QFC_RES	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC_RES	0xE00001	Memory Error	Free Error	Redownload the board and restart the application
QFC_RES	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC_RES	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC_RES	0xE00001	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application

QFC_RES	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC_RES	0xE00001	Unused		Redownload the board and restart the application
QFC1	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC1	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC1	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC1	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

[illegible]

[illegible]

QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC1	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC1	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC1	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC1	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

QFC1	0xE00001	Unused		Redownload the board and restart the application
QFC1	0xE00001	Unused		Redownload the board and restart the application
QFC1	0xE00001	Unused		Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application

[illegible]

QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

[illegible]

[illegible]

QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Clustering Error	Redownload the board and restart the application

[illegible]

QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message	Clustering Error	Redownload the board and restart the application

[illegible]

QFC2	0xE00001	Runtime kernel Failure while sending a Message		Save logs and continue running
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Save logs and continue running
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Save logs and continue running
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Save logs and continue running

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application

QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running

QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application

QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application

[illegible]

QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application

QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC2	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application

[illegible]

[illegible]

[illegible]

QFC2	0xE00001	Unused		Redownload the board and restart the application
QFC2	0xE00001	Unused		Redownload the board and restart the application
QFC2	0xE00001	Unused		Redownload the board and restart the application
QFC2	0xE00001	Unused		Redownload the board and restart the application
QFC2	0xE00001	Unused		Redownload the board and restart the application
QFC2	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Free Error	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Free Error	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application

QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Free Error	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Free Error	Redownload the board and restart the application
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFC3	0xE00001	Memory Error	Free Error	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

[illegible]

[illegible]

QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application

QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Unexpected Message or State Machine Error		Save logs and continue running
QFC3	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application

[illegible]

QFC3	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC3	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFC3	0xE00001	value out of bounds		Redownload the board and restart the application
QFC3	0xE00001	value out of bounds		Redownload the board and restart the application
QFC3	0xE00001	value out of bounds		Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Unused	Stream failure	Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application
QFC3	0xE00001	Unused		Redownload the board and restart the application

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFCP	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

[illegible]

QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application
QFCP	0xE00001	Unexpected Message or State Machine Error	Clustering Error	Redownload the board and restart the application

QFCP	0xE00001	Unused		Redownload the board and restart the application
QFCP	0xE00001	Unused		Redownload the board and restart the application
QFTR	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFTR	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFTR	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFTR	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFTR	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFTR	0xE00001	Memory Error	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
QFTR	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel Failure while sending a Message	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application

QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure		Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Runtime kernel system call failure	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application

QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Message or State Machine Error	Stream failure	Redownload the board and restart the application
QFTR	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFTR	0xE00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
QFTR	0xE00001	value out of bounds		Redownload the board and restart the application
QFTR	0xE00001	value out of bounds		Redownload the board and restart the application
		PSTN		

Resource	Loc Hex	Error Class	Error Subclass	Action to Be Taken
CAS	0x800101	value out of bounds		Redownload the board and restart the application
CAS	0x800101	value out of bounds		Redownload the board and restart the application
CAS	0x800102	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CAS	0x800102	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CAS	0x800103	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800103	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800104	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x800104	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CAS	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800109	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x800109	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x80010a	Unexpected Message or State Machine Error		Redownload the board and restart the application
CAS	0x80010a	Unexpected Message or State Machine Error		Redownload the board and restart the application
CAS	0x80010b	Unexpected Message or State Machine Error		Redownload the board and restart the application
CAS	0x80010b	Unexpected Message or State Machine Error		Redownload the board and restart the application
CAS	0x80010c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x80010c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x80010d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x80010d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CAS	0x80010e	Runtime kernel system call failure		Redownload the board and restart the application
CAS	0x80010e	Runtime kernel system call failure		Redownload the board and restart the application
CAS	0x80010f	Runtime kernel system call failure		Redownload the board and restart the application
CAS	0x80010f	Runtime kernel system call failure		Redownload the board and restart the application
CAS		Runtime kernel system call failure		Redownload the board and restart the application

CAS		Runtime kernel system call failure		Redownload the board and restart the application
CAS	0x800110	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CAS	0x800110	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CAS	0x800111	Runtime kernel system call failure		Redownload the board and restart the application
CAS	0x800111	Runtime kernel system call failure		Redownload the board and restart the application
CAS	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800114	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800114	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CAS	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000E3	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000E6	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000E9	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CCS	0x8000E3	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000E6	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000E9	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000E0	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E1	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E2	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E4	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E5	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E7	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E8	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E0	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E1	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E2	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E4	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E5	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000E7	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000E8	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800001	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800001	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800004	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800004	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800005	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x800005	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800007	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800007	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800008	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800008	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800009	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800009	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800011	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800012	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800016	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800016	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800017	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800017	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800020	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800020	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800021	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x800021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800022	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800022	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800024	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800024	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800025	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800025	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800027	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800027	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800028	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800028	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800029	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x800029	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800040	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800040	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800041	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800041	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800042	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800043	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800043	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800045	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800045	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800046	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800046	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x800047	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800047	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800048	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800048	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800049	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800049	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800050	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800050	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800052	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800052	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800053	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800053	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800054	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800054	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800055	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800056	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800056	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800062	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800062	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800063	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800063	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800064	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800064	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800065	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800065	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800066	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800066	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800067	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800068	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800068	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800069	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x800069	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800070	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800070	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800071	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800071	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800072	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800072	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800073	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800073	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800074	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800074	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800075	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800075	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800076	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800076	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800077	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x800077	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800078	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800078	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800079	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800079	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800080	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800080	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800081	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800081	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x800082	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800082	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800083	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800083	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800084	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800084	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800085	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x800085	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800086	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800086	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800087	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800087	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800088	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800088	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800089	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800089	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800090	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800090	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800091	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800091	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800092	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800092	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800093	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x800093	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800094	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800094	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800095	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800095	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800096	value out of bounds		Redownload the board and restart the application
CCS	0x800096	value out of bounds		Redownload the board and restart the application
CCS	0x800097	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800097	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800098	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800098	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800099	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800099	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800100	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800101	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800102	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x800103	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800104	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800106	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800107	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800108	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800112	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800113	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application

[illegible]

CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800114	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800115	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800116	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800118	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800121	Internal MMDL Macro Error		Redownload the board and restart the application

CCS	0x800122	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800123	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800124	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800126	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800127	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800128	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800129	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800130	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800131	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800132	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800134	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800135	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800136	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CCS	0x800138	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800139	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800140	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800141	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800142	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800143	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800144	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800145	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800146	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800147	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800148	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800149	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800150	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800151	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800152	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800153	Internal MMDL Macro Error		Redownload the board and restart the application

CCS	0x800154	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800155	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x800156	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x800157	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800157	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800158	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800158	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x800159	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800159	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800160	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800160	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800161	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800161	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800162	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x800163	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x800164	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CCS	0x800165	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80000A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80000A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80000C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80000C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80000D	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x80000D	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x80000E	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x80000E	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x80000F	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80000F	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80001A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80001A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80001B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x80001B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80001C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80001F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80003A	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003A	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003B	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003B	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003C	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x80003C	Memory Error	Free Error	Redownload the board and restart the application

CCS	0x80003D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80003D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80003E	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003E	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003F	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80003F	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80004A	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80004A	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80004B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80004C	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80004C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80004D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80004E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80004E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CCS	0x80004F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80004F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80005C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80005D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005E	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80005E	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80005F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80005F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80006A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80006A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x80006B	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80006B	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80006C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80006C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80006D	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80006D	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80006E	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80006E	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80006F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80006F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80007A	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80007A	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80007B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x80007D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80007F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80008A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80008A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80008B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80008B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80008C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80008C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80008D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80008D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80008E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80008E	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x80008F	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80008F	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80009A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80009A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80009B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80009B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80009C	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80009C	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80009D	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80009D	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80009E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80009E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80009F	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80009F	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000A0	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000A0	Internal MMDL Macro Error		Redownload the board and restart the application
CCS		Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000A1	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000A1	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000A2	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000A2	Internal MMDL Macro Error		Redownload the board and restart the application
CCS		Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000A3	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000A3	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000A4	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000A4	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000A5	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000A5	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000A6	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000A6	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000A7	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000A7	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000A8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000A8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000A9	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000A9	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000AA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000AA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000AB	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000AB	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000AC	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000AC	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000AD	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000AD	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000AE	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x8000AE	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000AF	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000AF	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000B0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000B0	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000B1	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000B1	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000B2	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B2	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B3	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000B3	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000B4	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000B4	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000B5	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000B5	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000B6	Internal MMDL Macro Error		Redownload the board and restart the application

CCS	0x8000B6	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000B7	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B7	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B9	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000B9	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000BA	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000BA	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000BB	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BB	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BC	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BC	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BD	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BD	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BE	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000BE	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000BF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000C0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000C1	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000C1	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000C2	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CCS	0x8000C2	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CCS	0x8000C3	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000C3	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000C4	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C4	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C5	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C5	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C6	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000C6	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C7	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CCS	0x8000C7	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CCS	0x8000C8	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C8	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000C9	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x8000C9	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x8000CA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000CA	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000CB	value out of bounds		Redownload the board and restart the application
CCS	0x8000CB	value out of bounds		Redownload the board and restart the application
CCS	0x8000CC	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CCS	0x8000CC	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CCS	0x8000CD	value out of bounds		Redownload the board and restart the application
CCS	0x8000CD	value out of bounds		Redownload the board and restart the application

CCS	0x8000CE	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000CE	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000CF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000CF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000D0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000D0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000D1	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000D1	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000D2	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000D2	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000D3	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000D3	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000D4	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000D4	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000D5	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000D5	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CCS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000D6	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000D6	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000D7	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000D7	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000D8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000D8	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000D9	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000D9	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DB	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DB	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000DC	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DC	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DD	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DD	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DE	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DE	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000DF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EA	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EB	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EB	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EC	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000EC	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000ED	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000ED	Runtime kernel system call failure		Redownload the board and restart the application

CCS	0x8000EE	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EE	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000EF	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000EF	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F0	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F1	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000F1	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000F2	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000F2	Internal MMDL Macro Error		Redownload the board and restart the application
CCS		Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000F3	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000F3	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CCS	0x8000F4	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F4	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F5	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000F5	Runtime kernel system call failure		Redownload the board and restart the application
CCS		Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000F6	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000F6	Memory Error	Free Error	Redownload the board and restart the application
CCS		Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000F7	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F7	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000F8	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000F8	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000F9	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000F9	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000FA	Internal MMDL Macro Error		Redownload the board and restart the application

CCS	0x8000FA	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x8000FB	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000FB	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x8000FC	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000FC	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x8000FD	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000FD	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000FE	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000FE	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x8000FF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x8000FF	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80010A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80010B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80010C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80010D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CCS	0x80010E	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CCS	0x80010F	Memory Error	Free Error	Redownload the board and restart the application
CCS	0x80011A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80011B	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80011C	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80011D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80011E	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80011F	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80013A	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80013B	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80013C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80013D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80013E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80013F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80014A	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80014B	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80014C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CCS	0x80014D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80014E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80014F	Internal MMDL Macro Error		Redownload the board and restart the application
CCS	0x80015A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CCS	0x80015B	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80015C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CCS	0x80015D	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80015E	Runtime kernel system call failure		Redownload the board and restart the application
CCS	0x80015F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHAN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHAN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHAN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHAN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHAN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHAN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800101	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHP	0xA00002	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00002	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800102	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00003	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00003	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0x800103	value out of bounds		Redownload the board and restart the application
CHP	0xA00004	value out of bounds		Redownload the board and restart the application
CHP	0xA00004	value out of bounds		Redownload the board and restart the application
CHP	0x800104	value out of bounds		Redownload the board and restart the application
CHP	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHP	0xA00007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800107	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP		Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80010a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00011	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00011	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00012	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHP	0xA00012	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80010c	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CHP	0xA00013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00014	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00014	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00015	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00015	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80010f	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00016	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CHP	0xA00016	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CHP	0x800110	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00017	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00017	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHP	0x800111	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00018	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0x800112	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0x800113	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00020	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00020	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0x800114	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0x800115	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00022	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00022	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHP	0xA00023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0x800119	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0x80011a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0x80011b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00027	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00027	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00028	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00028	Runtime kernel system call failure		Redownload the board and restart the application

CHP	0x80011c	Runtime kernel system call failure		Redownload the board and restart the application
CHP		Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA00029	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CHP	0xA00029	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CHP	0x80011d	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CHP	0xA00030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80011e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00031	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80011f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00031	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00032	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800120	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CHP	0xA00033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800121	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA00034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800122	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800123	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00036	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00037	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0x800126	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

CHP	0xA00038	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00038	Runtime kernel system call failure		Save logs and continue running
CHP	0xA00039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA00040	Memory Error	Free Error	Save logs and continue running
CHP	0x800128	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0x800129	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00041	Runtime kernel system call failure		Save logs and continue running
CHP	0xA00042	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80012a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00043	Memory Error	Free Error	Redownload the board and restart the application
CHP	0x80012b	Unexpected Pointer or Variable Value		Save logs and continue running
CHP	0xA00044	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x80012c	Unexpected Pointer or Variable Value		Save logs and continue running
CHP	0x80012d	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application

CHP	0xA00045	Memory Error	Free Error	Redownload the board and restart the application
CHP	0x80012e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00046	Memory Error	Free Error	Save logs and continue running
CHP	0x80012f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA00047	Memory Error	Free Error	Save logs and continue running
CHP	0xA00048	Runtime kernel system call failure		Save logs and continue running
CHP	0x800130	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA00049	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800132	Runtime kernel system call failure		Save logs and continue running
CHP	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0x800134	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0000A	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0000A	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0000B	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0000B	Internal MMDL Macro Error		Redownload the board and restart the application

CHP	0xA0000C	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0000C	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0000D	value out of bounds		Redownload the board and restart the application
CHP	0xA0000E	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0001A	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA0001A	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA0001B	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA0001B	Runtime kernel system call failure		Redownload the board and restart the application
CHP		Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA0001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA0001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHP	0xA0001D	Runtime kernel system call failure		Redownload the board and restart the application
CHP	0xA0001D	Runtime kernel system call failure		Redownload the board and restart the application

CHP	0xA0001E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA0001E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA0001F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA0001F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHP	0xA0002A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0002B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0002C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0002D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0002E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0002F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHP	0xA0003A	Internal MMDL Macro Error		Redownload the board and restart the application
CHP	0xA0004A	Runtime kernel system call failure		Redownload the board and restart the application
CHPCirca		Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA00002	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00003	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPISDN	0xA00004	value out of bounds		Redownload the board and restart the application

CHPISDN	0xA00005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA00006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00007	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00008	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00009	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPISDN	0xA00011	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00012	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00014	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00015	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00016	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CHPISDN	0xA00017	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA00019	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA00020	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CHPISDN	0xA00021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA00022	Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA00023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00024	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPISDN	0xA00026	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPISDN	0xA00027	Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA00028	Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA00029	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CHPISDN	0xA00030	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA00031	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA00032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPISDN	0xA00033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHPISDN	0xA00037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00038	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00039	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00040	Memory Error	Free Error	Save logs and continue running
CHPISDN	0xA00041	Runtime kernel system call failure		Save logs and continue running
CHPISDN	0xA00042	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00043	Memory Error	Free Error	Redownload the board and restart the application
CHPISDN	0xA00044	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA00045	Memory Error	Free Error	Save logs and continue running
CHPISDN	0xA00046	Memory Error	Free Error	Save logs and continue running
CHPISDN	0xA00047	Memory Error	Free Error	Save logs and continue running
CHPISDN	0xA00048	Runtime kernel system call failure		Save logs and continue running
CHPISDN	0xA00049	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA0000A	Internal MMDL Macro Error		Redownload the board and restart the application
CHPISDN	0xA0000B	Internal MMDL Macro Error		Redownload the board and restart the application

CHPISDN	0xA0000C	Internal MMDL Macro Error		Redownload the board and restart the application
CHPISDN	0xA0000D	value out of bounds		Redownload the board and restart the application
CHPISDN	0xA0000E	Internal MMDL Macro Error		Redownload the board and restart the application
CHPISDN	0xA0000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPISDN	0xA0001A	Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA0001B	Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA0001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPISDN	0xA0001D	Runtime kernel system call failure		Redownload the board and restart the application
CHPISDN	0xA0001E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA0001F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPISDN	0xA0004A	Runtime kernel system call failure		Redownload the board and restart the application
CHPPDK	0x800101	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800102	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800103	value out of bounds		Redownload the board and restart the application
CHPPDK	0x800104	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHPPDK	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800107	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80010a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80010c	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CHPPDK	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80010f	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800110	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800111	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800112	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800113	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800114	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800115	Runtime kernel system call failure		Redownload the board and restart the application

CHPPDK	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800119	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x80011a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x80011b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x80011c	Runtime kernel system call failure		Redownload the board and restart the application
CHPPDK		Runtime kernel system call failure		Redownload the board and restart the application
CHPPDK	0x80011d	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
CHPPDK	0x80011e	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x80011f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800120	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800121	Internal MMDL Macro Error		Redownload the board and restart the application
CHPPDK	0x800122	Runtime kernel system call failure		Redownload the board and restart the application
CHPPDK	0x800123	Unexpected Pointer or Variable Value		Redownload the board and restart the application

CHPPDK	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800126	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800128	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
CHPPDK	0x800129	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80012a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x80012b	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x80012c	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x80012d	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
CHPPDK	0x80012e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x80012f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800130	Unexpected Pointer or Variable Value		Redownload the board and restart the application
CHPPDK	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800132	Runtime kernel system call failure		Redownload the board and restart the application
CHPPDK	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

CHPPDK	0x800134	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800135	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
CHPPDK	0x800136	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x800101	value out of bounds		Redownload the board and restart the application
LCON	0x800101	value out of bounds		Redownload the board and restart the application
LCON	0x800101	value out of bounds		Redownload the board and restart the application
LCON	0x800101	value out of bounds		Redownload the board and restart the application
LCON	0x800102	value out of bounds		Redownload the board and restart the application
LCON	0x800102	value out of bounds		Redownload the board and restart the application
LCON	0x800102	value out of bounds		Redownload the board and restart the application
LCON	0x800102	value out of bounds		Redownload the board and restart the application
LCON	0x800103	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
LCON	0x800103	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
LCON	0x800103	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
LCON	0x800103	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
LCON	0x800104	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

LCON	0x800104	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800104	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800104	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800105	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800105	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800105	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800105	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800106	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800107	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

LCON	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800108	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800109	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010c	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x80010c	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010c	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010c	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80010f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80010f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

LCON	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800110	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800112	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800114	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800114	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800114	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800114	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800115	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800116	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800117	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800118	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800119	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

LCON	0x80011c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80011e	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011e	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011e	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011e	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80011f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800120	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800121	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800121	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800121	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800121	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800122	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800122	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800122	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800122	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800123	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800123	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800123	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800123	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800126	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800126	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800126	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800126	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800127	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800128	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800128	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800128	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800128	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800129	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800129	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800129	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800129	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

LCON	0x80012c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80012e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80012f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800130	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800130	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800130	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800130	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800132	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800132	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800132	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800132	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800134	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800134	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800134	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800134	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800135	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800135	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800135	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800135	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800136	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800136	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800136	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800136	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800138	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

LCON	0x800138	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800138	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800138	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800139	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800139	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800139	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800139	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80013a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80013a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80013a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80013a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x80013b	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013b	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013b	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013b	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013c	Runtime kernel system call failure		Redownload the board and restart the application

LCON	0x80013c	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013c	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013c	Runtime kernel system call failure		Redownload the board and restart the application
LCON	0x80013d	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
LCON	0x80013d	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
LCON	0x80013d	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
LCON	0x80013d	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
LCON	0x80013e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80013e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80013e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80013f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80013f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x80013f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800140	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800140	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800140	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

LCON	0x800141	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800141	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800141	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800142	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800142	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800142	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
LCON	0x800143	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800143	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800143	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800144	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800144	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
LCON	0x800144	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800002	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x800004	Runtime kernel system call failure		Redownload the board and restart the application

NFAS	0x800005	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800006	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800007	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800008	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800009	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800010	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800012	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800013	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800014	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800016	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800017	Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x800018	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800019	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x800020	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

NFAS	0x800021	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800022	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800023	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800024	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800025	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800026	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800027	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x800028	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800029	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x800030	Memory Error	Free Error	Redownload the board and restart the application
NFAS	0x800031	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800032	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800034	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800035	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800036	value out of bounds		Redownload the board and restart the application

NFAS	0x800037	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800038	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800040	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800041	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800042	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800043	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800044	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800045	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800046	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800047	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800048	Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x800049	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800050	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800051	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800052	Runtime kernel system call failure		Redownload the board and restart the application
NFAS		Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x800053	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800054	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS		Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x800055	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800057	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800058	Runtime kernel system call failure		Redownload the board and restart the application
NFAS		Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x800059	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800060	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800062	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x800063	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800064	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800065	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800066	Unexpected Pointer or Variable Value		Redownload the board and restart the application

NFAS	0x800067	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800068	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800069	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x800070	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800072	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800074	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x800075	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800076	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x800077	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800078	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x800079	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80000A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80000B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80000C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

NFAS	0x80000D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80000E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80000F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80001A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80001B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80001D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80001E	Internal MMDL Macro Error		Redownload the board and restart the application
NFAS	0x80001F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80002A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80002B	Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x80002C	Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x80002D	Runtime kernel system call failure		Redownload the board and restart the application
NFAS	0x80002E	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
NFAS	0x80002F	Memory Error	Free Error	Redownload the board and restart the application
NFAS	0x80003A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

NFAS	0x80003B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80003C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80003D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80003E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80003F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80004A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80004B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS		Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80004C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80004D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80004E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80004F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80005A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80005B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80005C	Memory Error	Free Error	Redownload the board and restart the application
NFAS	0x80005D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80005E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80005F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80006A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

NFAS	0x80006A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80006B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80006C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80006D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80006E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80006F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80007A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80007B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80007C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80007D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80007E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80007F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80008A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80008B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80008C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80008D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

NFAS	0x80008E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80008F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
NFAS	0x80009A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
NFAS	0x80009B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
NFAS	0x80009C	Unexpected Pointer or Variable Value		Save logs and continue running
SDL	0x800001	Runtime kernel Failure while sending a Message		Save logs and continue running
SDL	0x800001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SDL	0x800001	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SDL	0x800002	Runtime kernel Failure while sending a Message		Save logs and continue running
SDL	0x800002	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SDL	0x800002	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
SDL	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
SDL	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
SDL	0x800003	Runtime kernel system call failure		Redownload the board and restart the application
SDL		Runtime kernel system call failure		Redownload the board and restart the application
TRACER	0x800001	value out of bounds		Redownload the board and restart the application

TSC	0x900001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800101	value out of bounds		Redownload the board and restart the application
TSC	0x900002	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800102	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x900003	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800103	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900004	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800104	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x800105	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800106	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800107	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSC	0x800108	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800109	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80010a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80010b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80010c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80010d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80010e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80010f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSC	0x800110	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800111	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800112	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800113	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800114	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x800115	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800116	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x800117	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application

TSC	0x800118	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x800119	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x80011a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x80011b	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x80011c	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x80011d	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x900030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80011e	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900031	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80011f	Runtime kernel system call failure		Redownload the board and restart the application

TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900032	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800120	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800121	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800122	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800123	value out of bounds		Redownload the board and restart the application
TSC	0x900036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800124	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application

TSC	0x900037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800125	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x900038	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800126	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x900039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800127	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900040	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSC	0x800128	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC		Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x800129	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application

TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900041	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x80012a	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900042	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x80012b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x900043	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x80012c	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x900044	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x80012d	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900045	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x80012e	Runtime kernel system call failure		Redownload the board and restart the application
TSC		Runtime kernel system call failure		Redownload the board and restart the application

TSC	0x900046	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x900047	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSC	0x80012f	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x800130	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TSC	0x900048	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x800131	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900049	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSC	0x800132	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900050	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800133	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900051	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x800134	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900052	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x800135	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900053	value out of bounds		Redownload the board and restart the application
TSC	0x800136	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900054	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800137	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900055	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900056	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800138	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800139	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application

TSC	0x900057	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80013a	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80013b	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900059	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x900060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80013c	value out of bounds		Redownload the board and restart the application
TSC	0x80013d	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x900062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80013e	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900063	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSC	0x80013f	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900064	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800140	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900065	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800141	value out of bounds		Redownload the board and restart the application
TSC		value out of bounds		Redownload the board and restart the application
TSC	0x800142	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900066	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x800143	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900067	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x800144	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900068	Internal MMDL Macro Error		Redownload the board and restart the application

TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x900069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800145	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800146	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x900070	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x900071	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800148	value out of bounds		Redownload the board and restart the application
TSC		value out of bounds		Redownload the board and restart the application
TSC	0x800149	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC		Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x900072	value out of bounds		Save logs and continue running
TSC	0x80014a	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC		Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x80014b	Runtime kernel system call failure		Redownload the board and restart the application

TSC		Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x80014c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80014d	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80014e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80014f	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800150	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800151	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800152	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800153	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSC	0x800154	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800155	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800156	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800157	Internal MMDL Macro Error		Redownload the board and restart the application
TSC		Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800158	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800159	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80015a	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80015b	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80015c	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80015d	Internal MMDL Macro Error		Redownload the board and restart the application

TSC	0x80015e	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x80015f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800160	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800161	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800162	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800163	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800164	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x800165	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800166	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800167	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x800168	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800169	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x80016a	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80016b	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80016c	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80016d	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSC	0x80016e	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x80016f	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800170	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800171	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800172	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800173	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800174	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x800175	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800176	value out of bounds		Save logs and continue running
TSC	0x800177	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800178	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x800179	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80017A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x80017B	value out of bounds		Save logs and continue running
TSC	0x90002A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x90002B	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TSC	0x90002C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90002D	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x90002E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90002F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x90003A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x90003B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90003C	value out of bounds		Redownload the board and restart the application
TSC	0x90003D	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x90003E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x90003F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x90004A	Runtime kernel system call failure		Redownload the board and restart the application
TSC	0x90004B	value out of bounds		Redownload the board and restart the application
TSC	0x90004C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x90004D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x90004F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC	0x90005A	Runtime kernel system call failure		Redownload the board and restart the application

TSC	0x90005B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSC	0x90005C	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TSC	0x90005D	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x90005E	Internal MMDL Macro Error		Redownload the board and restart the application
TSC	0x90005F	Unexpected Message or State Machine Error		Redownload the board and restart the application
TSC	0x90006A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90006B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90006C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90006D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90006E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC	0x90006F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSC		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900001	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900030	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900031	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

TSPISDN	0x900032	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900033	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900034	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900035	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900036	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900037	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900038	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900039	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900040	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x900041	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x900042	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x900043	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x900044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x900045	Unexpected Pointer or Variable Value		Redownload the board and restart the application

TSPISDN	0x900046	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x900047	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSPISDN	0x900048	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x900049	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSPISDN	0x900050	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900051	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN		Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x900052	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x900053	value out of bounds		Redownload the board and restart the application
TSPISDN	0x900054	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900055	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900056	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900057	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

TSPISDN		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900059	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x900060	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN		Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN		Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900060	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900061	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900061	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900062	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900062	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900063	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900063	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900064	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900064	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900065	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900065	value out of bounds		Redownload the board and restart the application

TSPISDN	0x900066	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900066	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x900067	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x900067	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x900068	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900069	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900070	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN		Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900071	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900072	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900073	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900074	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900075	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900076	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

TSPISDN	0x900077	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900078	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900079	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900080	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900081	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900082	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x900083	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x900084	value out of bounds		Save logs and continue running
TSPISDN	0x90002A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x90002B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x90002C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90002D	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x90002E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90002F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90003A	Runtime kernel Failure while sending a Message		Redownload the board and restart the application

TSPISDN	0x90003B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90003C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x90003D	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x90003E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x90003F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90004A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90004B	value out of bounds		Redownload the board and restart the application
TSPISDN	0x90004C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90004D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90004F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90005A	Runtime kernel system call failure		Redownload the board and restart the application
TSPISDN	0x90005B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x90005C	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
TSPISDN	0x90005D	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x90005D	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x90005E	Internal MMDL Macro Error		Redownload the board and restart the application

TSPISDN	0x90005E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
TSPISDN	0x90005F	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90005F	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN		Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x90006A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90006B	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90006C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90006D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90006E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
TSPISDN	0x90006F	Runtime kernel system call failure	Clustering Error	Redownload the board and restart the application
TSPISDN	0x90007A	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN		Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN		Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN		Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x90007B	Internal MMDL Macro Error		Redownload the board and restart the application
TSPISDN	0x90007C	Internal MMDL Macro Error		Redownload the board and restart the application

TSPISDN	0x90007D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN		Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90007E	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
TSPISDN	0x90007F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
		IP		
Resource	Loc Hex	Error Class	Error Subclass	Action to Be Taken
H323	0x800001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800002	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x800003	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
H323	0x800004	Unexpected Pointer or Variable Value	Stream failure	Redownload the board and restart the application
H323	0x800005	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x800006	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x800007	Memory Error	Free Error	Redownload the board and restart the application
H323	0x800008	value out of bounds	Stream failure	Redownload the board and restart the application
H323	0x800009	value out of bounds	Stream failure	Redownload the board and restart the application

H323	0x80000A	Unused		Redownload the board and restart the application
H323	0x80000B	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x80000C	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x80000D	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x80000E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x80000F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800010	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800013	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800019	Unexpected Pointer or Variable Value		Redownload the board and restart the application

H323	0x80001A	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x80001B	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x80001C	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x80001D	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x80001E	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x80001F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x800020	Unused		Redownload the board and restart the application
H323	0x800021	Unused		Redownload the board and restart the application
H323	0x800022	Unused		Redownload the board and restart the application
H323	0x800023	Unused		Redownload the board and restart the application
H323	0x800024	Unused		Redownload the board and restart the application
H323	0x800025	Unused		Redownload the board and restart the application
H323	0x800026	Unused		Redownload the board and restart the application
H323	0x800027	Unused		Redownload the board and restart the application
H323	0x800028	Unused		Redownload the board and restart the application
H323	0x800029	Unexpected Pointer or Variable Value		Redownload the board and restart the application

H323	0x80002A	value out of bounds		Redownload the board and restart the application
H323	0x80002B	value out of bounds		Redownload the board and restart the application
H323	0x80002C	value out of bounds	Stream failure	Redownload the board and restart the application
H323	0x80002D	Memory Error	Free Error	Redownload the board and restart the application
H323	0x80002E	Memory Error	Free Error	Redownload the board and restart the application
H323	0x80002F	Memory Error	Free Error	Redownload the board and restart the application
H323	0x800030	Memory Error	Free Error	Redownload the board and restart the application
H323	0x800031	Unused		Redownload the board and restart the application
H323	0x800032	Unused		Redownload the board and restart the application
H323	0x800033	Unused		Redownload the board and restart the application
H323	0x800034	Unused		Redownload the board and restart the application
H323	0x800035	Unused		Redownload the board and restart the application
H323	0x800036	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x800037	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800038	value out of bounds		Redownload the board and restart the application
H323	0x800039	Memory Error	Free Error	Redownload the board and restart the application

H323	0x80003A	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x80003B	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x80003C	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x80003D	Memory Error	Free Error	Redownload the board and restart the application
H323	0x80003E	Memory Error	Free Error	Redownload the board and restart the application
H323	0x80003F	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x800040	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x800041	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x800042	value out of bounds		Redownload the board and restart the application
H323	0x800043	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800045	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800046	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x800047	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x800048	Memory Error	Free Error	Redownload the board and restart the application
H323	0x800049	Runtime kernel system call failure		Redownload the board and restart the application

H323	0x80004A	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
H323	0x80004B	Runtime kernel Failure while receiving a Message		Redownload the board and restart the application
H323	0x80004C	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x80004D	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x80004E	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x80004F	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800050	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800051	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800052	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800053	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x800054	Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323	0x800055	Runtime kernel system call failure		Redownload the board and restart the application
H323	0x800056	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x800057	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x800058	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x800059	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size

H323	0x80005A	Internal MMDL Macro Error		Redownload the board and restart the application
H323	0x80005B	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x80005C	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x80005D	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x80005E	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x80005F	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x800060	Memory Error	Allocation Error	Redownload the board and restart the application; try increasing pool size
H323	0x800061	Runtime kernel Failure while sending a Message		Redownload the board and restart the application
H323	0x800062	Memory Error	Free Error	Redownload the board and restart the application
H323	0x800063	Memory Error	Free Error	Redownload the board and restart the application
H323	0x800064	Unused		Redownload the board and restart the application
H323	0x800065	Unused		Redownload the board and restart the application
H323	0x800066	Unused		Redownload the board and restart the application
H323		Unexpected Pointer or Variable Value		Redownload the board and restart the application
H323		Unused		Redownload the board and restart the application
H323		Unused		Redownload the board and restart the application

T38	0xD00001	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00002	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00003	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00004	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00005	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00006	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00007	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00008	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00009	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0000a	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0000b	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD0000c	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0000d	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0000e	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0000f	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD00010	Unexpected Pointer or Variable Value		Redownload the board and restart the application

T38	0xD00011	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00012	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00013	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00014	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00015	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00016	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00017	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00018	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00019	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD0001a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0001b	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0001c	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0001d	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0001e	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0001f	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD00020	Unexpected Pointer or Variable Value		Redownload the board and restart the application

T38	0xD00021	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00022	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00023	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00024	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00025	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00026	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00027	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00028	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00029	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0002a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0002b	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0002c	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0002d	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD0002e	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0002f	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00030	Unexpected Pointer or Variable Value		Redownload the board and restart the application

T38	0xD00031	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00032	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00033	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00034	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00035	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00036	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00037	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00038	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00039	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0003a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0003b	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0003c	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0003d	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD0003e	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0003f	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00040	Unexpected Pointer or Variable Value		Redownload the board and restart the application

T38	0xD00041	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00042	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00043	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00044	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00045	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00046	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD00047	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD00048	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00049	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0004a	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0004b	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD0004c	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD0004d	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0004e	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD0004f	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00050	Unexpected Pointer or Variable Value		Redownload the board and restart the application

T38	0xD00051	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00052	Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38	0xD00053	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD00054	Unexpected Message or State Machine Error		Redownload the board and restart the application
T38	0xD00055	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00056	Unexpected Message or State Machine Error		Save logs and continue running
T38	0xD00057	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00058	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00059	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0005a	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0005b	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0005c	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0005d	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0005e	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0005f	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00060	Unexpected Pointer or Variable Value		Save logs and continue running

T38	0xD00061	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00062	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00063	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00064	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00065	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00066	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00067	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00068	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00069	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0006a	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0006b	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0006c	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0006d	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0006e	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0006f	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00070	Unexpected Pointer or Variable Value		Save logs and continue running

T38	0xD00071	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00072	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00073	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00074	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00075	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00076	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00077	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00078	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00079	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0007a	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0007b	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0007c	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0007d	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0007e	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD0007f	Unexpected Pointer or Variable Value		Save logs and continue running
T38	0xD00080	Unexpected Pointer or Variable Value		Save logs and continue running

T38		Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38		Unexpected Pointer or Variable Value		Redownload the board and restart the application
T38		Unexpected Pointer or Variable Value		Save logs and continue running
T38		Unexpected Pointer or Variable Value		Save logs and continue running
T38		Unexpected Pointer or Variable Value		Save logs and continue running